

## **ALLWEILER PUMPS**

### Operation and Maintenance Manual with Spare Parts List.

**The following ALLWEILER PUMPS are included in SET:**

ALLWEILER NAM-F series - Centrifugal Pump with Volute Casing - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER NTT series - Volute-Casing Centrifugal Pumps PN 16 for Heat Transfer Oils up to 350 gr. C - Operating and Maintenance Instructions with Parts List.

ALLWEILER AEB1L, AEB.E, AEB.N, AEB.H, AEDB1E, AEDB2N series (Design IE, ZE) - Eccentric Screw Pumps - Operating and Maintenance Instructions with Dismounting and Mounting Instructions and Spare Parts List. Technical specification and operating instructions Safety valve type ASV (Membrane-type angular overflow valve - Manual with parts list.

ALLWEILER S75, S100, S150, S450, S456 series - Centrifugal Pump - Operating Instructions, Spare Parts List, Installation Plans.

ALLWEILER NIT series - Volute Casing Centrifugal Pump - Operating and Maintenance Instructions with Parts List.

ALLWEILER NBT series - Volute Casing Centrifugal Pump - Operating and Maintenance Instructions with Parts List.

ALLWEILER NT09-WH, CTWH, NBWH, CBWH, NIWH, CIWH series - Volute Casing Centrifugal Pump - Operating and Maintenance Instructions with Parts List.

ALLWEILER MI and MA series - Centrifugal Pump - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER NB and CLB series - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER SN...ER series, Design D, E and KA - Screw pumps - Operation and Maintenance Manual with Spare Parts List. Pressure - Relief valves, directly controlled. Series DS and DT - Operation and Maintenance Instruction with Spare Parts List.

ALLWEILER UNIPUMP - Close coupled Sewage pump series K, HK, QSN ( K 25...HK 25 Type G and GF, K 50...HK 50, K 80...HK 80, QSH 101 - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER Screw Pump - TRILUB TRL series - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER Screw Pump - series SPF - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER ALLMARINE MELO (ME Lub. Pump) - - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER Series NIM of the in-line type, Series NAM with axial inlet - Centrifugal Pump with Volute Casing - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER NI series - Centrifugal Pump with Volute Casing - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER SN...ER series, Design U - Screw pumps - Operation and Maintenance Manual with Spare Parts List. Pressure - Relief valves, directly controlled. Series DS and DT - Operation and Maintenance Instruction with Spare Parts List.

ALLWEILER NISM series - Centrifugal Pump with Volute Casing - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER Progressive Cavity Pumps TECFLOW series - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER Peristaltic Pumps ASH series, Design ID - Operation and Maintenance Manual with Spare Parts List.

ALLWEILER AE1L, AE.E, AE.N, AE.H, AE.V, AED1E, AED2N series (Design ID, ZD) - Eccentric Screw Pumps - Operating and Maintenance Instructions with Dismounting and Mounting Instructions and Spare Parts List.

ALLWEILER SN series - Screw Pumps - Operation and Maintenance Manual with Spare Parts List.