


Spare Parts Catalogs

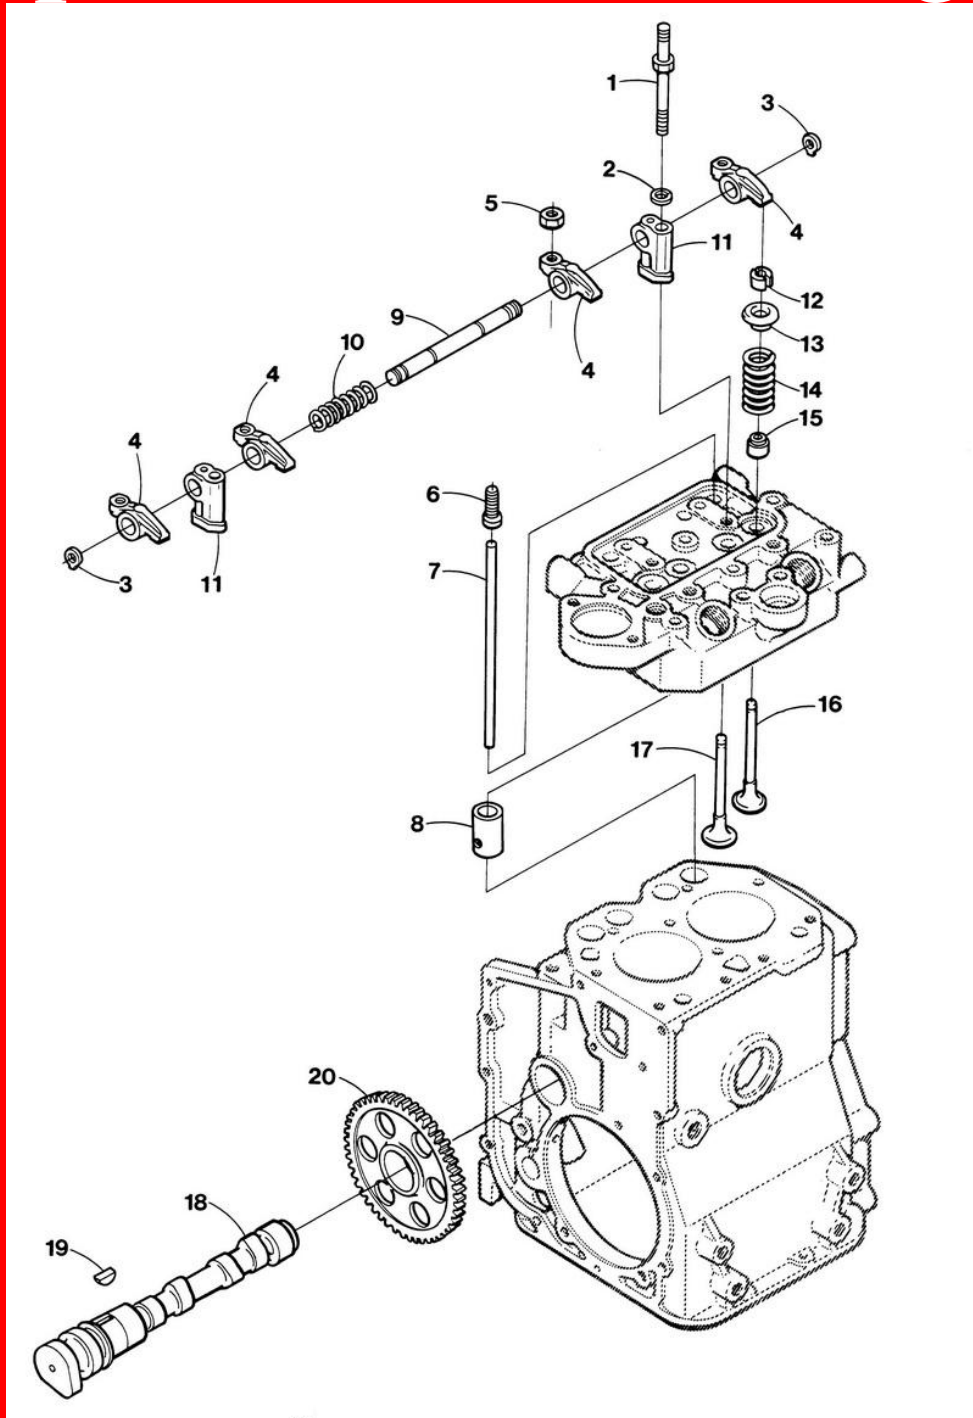

SPARE PARTS CATALOGS

Model	Parts Manual
Carbureted Gasoline Generators	
3.0 BPMG - 50 Hz	Parts Manual Preliminary
3.0 BPMG - 50 Hz Fresh Water-Cooled	Parts Manual Preliminary
3.0 BPMG - 60 Hz	Parts Manual Preliminary
3.0 BPMG - 60 Hz Fresh Water-Cooled	Parts Manual Preliminary
3.5 BCG - 50 Hz	Parts Manual 036194
3.5 BCG - 50 Hz	Parts Manual 037984
3.75 BCGB - 50 Hz	Parts Manual 045000
3.75 BCGTC - 50 Hz	Parts Manual 044900
3.75 BCGTE - 50 Hz	Parts Manual 044900
4.0 BCG	Parts Manual 036194
4.2 BCG Low-Profile - 50 Hz	Parts Manual Preliminary 57
4.2 BCGA Low-Profile - 50 Hz	Parts Manual Preliminary 57
4.5 BCG	Parts Manual 037984
4.5 BCGB	Parts Manual 045000
4.5 BCGTC	Parts Manual 044900
4.5 BCGTE	Parts Manual 044900
4.8 BCG - 50 Hz	Parts Manual 036194
4.9 TWG - 50 Hz	Parts Manual 034630
5.0 BCG - 50 Hz	Parts Manual 037984
5.0 BCG Low-Profile	Parts Manual Preliminary 57
5.0 BCGA Low-Profile	Parts Manual Preliminary 57
5.8 BCGC Low-Profile - 50 Hz	Parts Manual Preliminary 57
5.8 BCGD Low-Profile - 50 Hz	Parts Manual Preliminary 57
6.0 BCGTC - 50 Hz	Parts Manual 044900
6.0 BCGTE - 50 Hz	Parts Manual 044900
6.0 TWG - 50 Hz	Parts Manual 034630
6.4 BEG - 50 Hz	Parts Manual Preliminary 815
6.5 BCG	Parts Manual 036194
6.5 TWG	Parts Manual 034630
6.8 BTG - 50 Hz	Parts Manual 037315
7.0 BCG	Parts Manual 037984
7.0 BCGA - 60 Hz Only	Parts Manual 037984
7.0 BCGB	Parts Manual 045000
7.0 BCGC Low-Profile	Parts Manual Preliminary 57
7.0 BCGD Low-Profile	Parts Manual Preliminary 57
7.0 BTG - 50 Hz	Parts Manual 036801
7.2 BCGTC	Parts Manual 044900
7.2 BCGTE	Parts Manual 044900
8.0 BCGTC - 50 Hz	Parts Manual 044900
8.0 BCGTE - 50 Hz	Parts Manual 044900
8.0 BEG - 50 Hz	Parts Manual Preliminary 815
8.0 BEG - 60 Hz	Parts Manual Preliminary 815
8.0 TWG	Parts Manual 034630
8.5 BTG	Parts Manual 037315
9.0 BTG	Parts Manual 036801

9.6 BCGTC	Parts Manual 044900
9.6 BCGTE	Parts Manual 044900
10.0 BEG	Parts Manual Preliminary 815
10.0 BEG - 50 Hz	Parts Manual Preliminary 815
10.0 BTG - 50 Hz	Parts Manual 037315
11.0 TWG	Parts Manual 034630
12.0 BEG - 50 Hz	Parts Manual Preliminary 815
12.0 BTG - 50 Hz	Parts Manual 037315
12.5 BEG	Parts Manual Preliminary 815
12.5 BTG	Parts Manual 037315
15.0 BEG	Parts Manual Preliminary 815
15.0 BTG	Parts Manual 037315
16.0 BEG - 50 Hz	Parts Manual 048000
20.0 BEG	Parts Manual 048000
20.0 BEG - 50Hz	Parts Manual 048000
25.0 BEG	Parts Manual 048000
Century Engines	
No Matching Records Found	
Climate Control	
10,000 BTU	Rotary Aire Parts Manual - 050259
17,000 BTU	Rotary Aire Parts Manual - 050259
Diesel Generators	
2.4 WMD - 50 Hz	Parts Manual 033404
3.0 WMD	Parts Manual 033404
3.3 BCD - 50 Hz	Parts Manual 032139
3.3 WMD - 50 Hz	Parts Manual 032139
3.5 BCDT - 50 Hz	Parts Manual Preliminary 3.8
3.8 BCDT	Parts Manual Preliminary 3.8
4.0 BCD - 50 Hz	Parts Manual 038677
4.0 BCDA - 50 Hz	Parts Manual 038677
4.0 BCDB - 50 Hz	Parts Manual 038677
4.2 BCDT	Parts Manual Preliminary 3.8
4.4 BCD	Parts Manual 032139
4.4 WMD	Parts Manual 032139
4.5 BCD - 50 Hz	Parts Manual 032139
4.5 WMD - 50 Hz	Parts Manual 032139
5.0 BCD - 60 Hz	Parts Manual 038677
5.0 BCDA	Parts Manual 038677
5.0 BCDB	Parts Manual 038677
5.0 BTD - 50 Hz	Parts Manual 041800
5.7 BTD - 50 Hz	Parts Manual 041800
5.8 WMD - 50 Hz	Parts Manual 032139
6.0 BCD	Parts Manual 032139
6.0 BTD - 50 Hz	Parts Manual 032139
6.0 BTDA - 50 Hz	Parts Manual 048220
6.0 WMD	Parts Manual 032139
6.0 WMD - 50 Hz	Parts Manual 032139
6.5 BTD	Parts Manual 041800
7.5 BTD - 50 Hz	Parts Manual 036776
7.5 BTDA - 50 Hz	Parts Manual 048220

7.6 BTD	Parts Manual 041800
7.7 WMD	Parts Manual 032139
8.0 BTD	Parts Manual 032139
8.0 BTDA	Parts Manual 048220
8.0 WMD	Parts Manual 032139
8.3 BTD - 50 Hz	Parts Manual 036776
8.3 WMD - 50 Hz	Parts Manual 032139
9.4 BTD - 50 Hz	Parts Manual 032139
9.4 BTDA - 50 Hz	Parts Manual 036776
9.4 BTDB - 50 Hz	Parts Manual 047631
9.4 WMD - 50 Hz	Parts Manual 032139
10.0 BTD	Parts Manual 036776
10.0 BTDA	Parts Manual 048220
11.0 BTD	Parts Manual 036776
11.0 WMD	Parts Manual 032139
12.0 BTD - 50 Hz	Parts Manual 034908
12.0 BTDA - 50 Hz	Parts Manual 038824
12.0 BTDB - 50 Hz	Parts Manual 038824
12.0 BTDC - 50 Hz	Parts Manual 047631
12.5 BTD - 60 Hz	Parts Manual 032139
12.5 BTDA	Parts Manual 036776
12.5 BTDB	Parts Manual 047631
12.5 WMD	Parts Manual 032139
15.0 BTD	Parts Manual 034908
15.0 BTDA	Parts Manual 038824
15.0 BTDB	Parts Manual 038824
15.0 BTDC	Parts Manual 047631
15.0 WTA - 60 Hz	Parts Manual 032416
16.0 BED - 50 Hz	Parts Manual 039904
16.0 BEDA - 50 Hz	Parts Manual 042000
16.0 WMF - 50 Hz	Parts Manual 024577
16.0 WTA - 50 Hz	Parts Manual 024577
20.0 BED - 50 Hz	Parts Manual 040000
20.0 BED - 60 Hz	Parts Manual 039904
20.0 BEDA	Parts Manual 042000
20.0 WMF - 50Hz	Parts Manual 033620
20.0 WMF - 60 Hz	Parts Manual 024577
20.0 WTA - 50Hz	Parts Manual 033620
20.0 WTA - 60 Hz	Parts Manual 024577
25.0 BED - 50 Hz	Parts Manual 041200
25.0 BED - 60 Hz	Parts Manual 040000
25.0 BEDA - 50 Hz	Parts Manual 041512
25.0 WMF - 50 Hz	Parts Manual 033620
25.0 WMF - 60 Hz	Parts Manual 033620
25.0 WTA - 60 Hz	Parts Manual 033620
26.0 WTA	Parts Manual 033620
32.0 BED	Parts Manual 041200
32.0 BEDA	Parts Manual 041512
32.0 WMF - 60 Hz	Parts Manual 033620

Electronic Diesel Generators	
26.0 EDE D-NET - 50 Hz	Parts Manual Preliminary 2633
33.0 EDE D-NET	Parts Manual Preliminary 2633
Gasoline Engines	
W 41G	Parts Manual 034630
W 70G	Parts Manual 034630
Industrial Generators	
6.0 BTDR - 50 Hz	Parts Manual 039742
8.0 BTDR	Parts Manual 039742
9.4 BTDR - 50 Hz	Parts Manual 039742
10.0 BTDR	Parts Manual 039742
11.0 BTDR	Parts Manual 039742
12.5 BTDR	Parts Manual 039742
Low-CO EFI Gasoline Generators	
No Matching Records	
Universal Engines	
5411	Parts Manual 200138
5416	Parts Manual 200140
5421	Parts Manual 200142
5424	Parts Manual 200143
5432	Parts Manual 200147
5444	Parts Manual 200148
M2-12	Parts Manual 200137
M3-20	Parts Manual 200141
M3-20B	Parts Manual 201009
M4-30	Parts Manual 200144
M-12	Parts Manual 200137
M-15	Parts Manual 200138
M-18	Parts Manual 200139
M-20	Parts Manual 200140
M-25	Parts Manual 200142
M-25XP	Parts Manual 200142
M-25XPB	Parts Manual 201021
M-25XPBC	Parts Manual 201021
M-30	Parts Manual 200143
M-35	Parts Manual 200145
M-35B	Parts Manual 201021
M-35BC	Parts Manual 201021
M-40	Parts Manual 200146
M-40B	Parts Manual 201021
Universal Atomic 4	Parts Manual 200150
Westerbeke Engines	
04/01/0107	Parts Manual 013765
4-60	Parts and Technical Manual 016521
4-99	Parts Manual 013765
7A One	Parts Manual Preliminary 7A
12C Two	Parts Manual 039721
12D Two	Parts Manual 039721
20B Two	Parts Manual 037115

30B Three	Parts Manual 037115
30C Three	Parts Manual 037115
35B Three	Parts Manual 036776
35C Three	Parts Manual 048220
35D Three	Parts Manual 048220
35E Three	Parts Manual 048220
38B Four	Parts Manual 036776
42B Four	Parts Manual 036776
44A Four	Parts Manual 047631
44B Four	Parts Manual 047631
44C Four	Parts Manual 047631
55A Four	Parts Manual 044000
63B Four	Parts Manual 038824
63C Four	Parts Manual 038824
71B Four	Parts Manual 039904
71C Four	Parts Manual 042000
82B Four	Parts Manual 040000
90A Four	Parts Manual 041512
108B Six	Parts Manual 041200
108C Six	Parts Manual 041200
DS 5	Parts Manual 012137
DS 7	Parts Manual 012137
L-25	Parts and Technical Manual 019419
W 7	Parts Manual 012137
W 10 Two	Parts Manual 033404
W 13	Parts Manual 032139
W 13A	Parts Manual 032139
W 18	Parts Manual 032139
W 21	Parts Manual 032139
W 21A	Parts Manual 032139
W 27	Parts Manual 032139
W 27A	Parts Manual 032139
W 30	Parts Manual 013945
W 33	Parts Manual 032139
W 33A	Parts Manual 032139
W 40	Parts Manual 013765
W 46	Parts Manual 034908
W 50	Parts Manual 023157
W 52	Parts Manual 032416
W 58	Parts Manual 024577
W 60	Parts Manual 013316
W 70	Parts Manual 033620
W 80	Parts Manual 015162
W 100	Parts Manual 033620
W 120	Parts Manual 015162



Technical Library

<http://engine.od.ua>

