

Operation

Maintenance

Parts List

Engine Type : DK - 28

INSTRUCTION MANUAL

HSD ENGINE Co., Ltd Customer Satisfaction team

**Technical Service : +82 55 278 6181 / Parts Sales : +82 55 260 6374 / Telefax : +82 55 260 6772/3
69-3, Sinchon-dong, Changwon-City, Kyungnam, Korea 641-370**

Index for Operation Manual

Chapter	Title
0	Introduction
1	General
2	General Construction
3	Engine Adjustment Standards
4	Operation
5	Inspection and Maintenance
6	Fuel Oil, Lubricating Oil, Cooling Water
7	Troubleshooting and Countermeasures



CONTENTS

Chapter 0 INTRODUCTION	0
1. Before Running Daihatsu Diesel Engine	0-1
2. Basic Information on Safety Operation	0-2
2.1 Safety Precautions	0-2.1
2.2 Safety Signs and Symbol Marks	0-2.2
2.3 Indication of Warning: Warning Labels	0-2.3
2.4 Indication of Warning: Warning Label Positions	0-2.4
3. Engine Conforming to NOx Technical Code	0-3
3.1 Outline	0-3.1
3.2 The parts to be Specified	0-3.2
3.3 Engine settings	0-3.3
4. General Information	0-4
4.1 Notation of Engine Types	0-4.1
4.2 Definition of Terms	0-4.2
4.3 Units	0-4.3
Chapter 1 GENERAL	1
1. Engine Specifications	1-1
2. Auxiliary Equipment	1-2
3. Engine Outline and Equipment Layout	1-3
Chapter 2 GENERAL CONSTRUCTION	2
1. Engine	2-1
1.1 Engine Frame, Cylinder Liner, and Main Bearing	2-1.1
1.2 Crankshaft and Bearing	2-1.2
1.3 Camshaft and Timing Gear	2-1.3
1.4 Piston and Connecting Rod	2-1.4
1.5 Cylinder Head	2-1.5
1.6 Fuel Injection Device	2-1.6
1.7 Valve Operation Device	2-1.7
1.8 Fuel Control Device	2-1.8
1.9 Intake and Exhaust System	2-1.9
2. Piping Systems	2-2
2.1 Starting Pneumatic System	2-2.1
2.2 Fuel Oil System	2-2.2
2.3 Lubricating Oil System	2-2.3
2.4 Cooling Water System	2-2.4
2.5 Nozzle Cooling System	2-2.5



CONTENTS

3. Controlling Engine Operation: Protective Device	2-3
3.1 Starting Control	2-3-1
3.2 Stoppage Control	2-3-2
3.3 Engine Protection System	2-3-3

Chapter 3 ENGINE ADJUSTMENT STANDARDS 3

1. Operating Specifications	3-1
2. Valve Settings	3-2

Chapter 4 OPERATION 4

1. Precautions for Operation	4-1
1.1 In case of Starting	4-1.1
1.2 In case of Operation	4-1.2
1.3 In case of Stoppage	4-1.3
2. Preparation for Operation	4-2
2.1 Preparation for Daily Operation	4-2.1
2.2 Preparation for Initial Starting after Installation and Starting after Extended Disuse or Overhaul	4-2.2
3. Starting	4-3
3.1 Starting Procedure	4-3.1
3.2 Inspection and Check Items Immediately after Starting	4-3.2
4. Operation	4-4
4.1 Running-in	4-4.1
4.2 Warming up and Connecting Load to the Engine	4-4.2
4.3 Operation with Load (Normal Operation)	4-4.3
4.4 Operation Using Heavy Fuel Oil (for Heavy Fuel Oil Engines)	4-4.4
4.5 Allowable Operating Range	4-4.5
5. Special Operation	4-5
5.1 Low-load Operation	4-5.1
5.2 Operation with Air Cooler Cut off	4-5.2
5.3 Non Turbocharger Operation	4-5.3
5.4 Operation with Reduced Number of Cylinders	4-5.4
6. Stoppage	4-6
6.1 Normal Stoppage	4-6.1
6.2 Emergency Stop	4-6.2
6.3 Long-term Shutdown	4-6.3



CONTENTS

Chapter 5 INSPECTION AND MAINTENANCE	5
1. Precautions for Inspection and Maintenance	5-1
1.1 Safety Precautions	5-1.1
1.2 Cautionary Items When Finishing Inspection and Maintenance	5-1.2
2. Inspection and Maintenance Item Table	5-2
3. Measurements and Adjustments	5-3
3.1 Maximum Explosion Pressure and Exhaust Temperature	5-3.1
3.2 Pressure and Temperature of Each Part	5-3.2
4. Inspection and Maintenance	5-4
4.1 Inspecting Parts on and around Intake and Exhaust Valves, and Adjusting Valve End Clearance	5-4.1
4.2 Inspection and Maintenance of Fuel Injection Valve	5-4.2
4.3 Cleaning Filters	5-4.3
4.4 Cleaning Turbocharger Blower	5-4.4
4.5 Cleaning Turbocharger Turbine Side	5-4.5
4.6 Measuring Crankshaft Deflection	5-4.6
4.7 Inspecting and Replacing Protective Zinc	5-4.7
 Chapter 6 FUEL OIL, LUBRICATING OIL, COOLING WATER	 6
1. Fuel Oil Characteristics and Control	6-1
1.1 Selecting Fuel Oil	6-1.1
1.2 Fuel Oil Characteristics and Control	6-1.2
2. Lubricating Oil Characteristics and Control	6-2
2.1 Selecting Lubricating Oil	6-2.1
2.2 Lubricating Oil Characteristics and Control	6-2.2
3. Cooling Water Characteristics and Control	6-3
3.1 Cooling Fresh Water (Raw Water)	6-3.1
3.2 Corrosion Prevention Agent	6-3.2
 Chapter 7 TROUBLESHOOTING AND COUNTERMEASURES	 7
1. Precautions for Troubleshooting	7-1
2. Troubleshooting and Countermeasures	7-2
2.1 When Starting is Difficult	7-2.1
2.2 When Engine Revolution Is Not Smooth	7-2.2
2.3 Insufficient Output	7-2.3
2.4 When Exhaust Gas Temperature or Maximum Explosion Pressure Is Abnormal	7-2.4



CONTENTS

2.5 When Exhaust Gas Shows Abnormal Color	7-2.5
2.6 Abnormal Noise/Abnormal Vibration	7-2.6
2.7 When Engine Stops Suddenly	7-2.7
2.8 Unable to Stop Engine	7-2.8
2.9 Overspeed	7-2.9
2.10 Low Lubricating Oil Pressure	7-2.10
2.11 High Lubricating Oil Temperature	7-2.11
2.12 Low Cooling Water Pressure (Jacket Line)	7-2.12
2.13 High Cooling Water Temperature (Jacket Line)	7-2.13

Index for Maintenance Manual

Chapter	Title
0. Introduction	
1. Equipment Arrangement and Maintenance Schedule	
2. General Maintenance Items	
3. Cylinder Head and Valves	
4. Piston and Connecting Rod	
5. Engine Frame and Cylinder Liner	
6. Main Bearing and Thrust Bearing	
7. Crankshaft	
8. Timing Gear And Camshaft	
9. Fuel Oil Injection Device	
10. Valve Operating Device	
11. Governor Driving Device	
12. Intake and Exhaust Device	
13. Starting Air System	
14. Fuel Oil System	
15. Lubricating Oil System	
16. Cooling Water System	
17. Engine Control and Protective Device	
18. Gauge Board	



CONTENTS

0. INTRODUCTION	0
1. Prior to Start of Engine Maintenance	0 - 1
2. Precautions Pertaining to Maintenance: Safety Precautions	0 - 2
2. 1 Safety Precautions.....	0 - 2.1
2. 2 Precautions for Disassembly, Maintenance, and Assembly.....	0 - 2.2
2. 3 Check Items after Disassembly, Maintenance, and Assembly	0 - 2.3
3. Engine Conforming to NOx Technical Code	0 - 3
3. 1 Outline	0 - 3.1
3. 2 The Parts to be Specified	0 - 3.2
3. 3 Engine Settings Value	0 - 3.3
1. EQUIPMENT ARRANGEMENT AND MAINTENANCE SCHEDULE	1
1. Equipment Arrangement	1 - 1
2. Maintenance Schedule Table	1 - 2
2. GENERAL MAINTENANCE ITEMS	2
1. Preparation before Maintenance Work.....	2 - 1
2. General Consumables and Materials, General Tools, Implements, and Measuring Instruments.....	2 - 2
2. 1 General Consumables and Materials	2 - 2.1
2. 2 General Tools, Implements and Measuring Instruments	2 - 2.2
3. Bolt and Nut Tightening Torque, Tightening Oil Pressure.....	2 - 3
4. Hydraulic Jack	2 - 4
4. 1 General Construction	2 - 4.1
4. 2 Removal of Nut	2 - 4.2
4. 3 Tightening of Nuts	2 - 4.3
4. 4 Maintenance of Hydraulic Jack	2 - 4.4
3. CYLINDER HEAD AND VALVES	3
1. Cylinder Head	3 - 1
1. 1 General Construction	3 - 1.1
1. 2 Replacing Consumauring Instruments	3 - 1.2
1. 3 Removal of Cylinder Head	3 - 1.3
1. 4 Inspection and Maintenance of Cylinder Head (Body)	3 - 1.4
1. 5 Intake and Exhaust Valve	3 - 1.5
1. 6 Intake and Exhaust Valve Seats	3 - 1.6
1. 7 Mounting of Cylinder Head	3 - 1.7
2. Intake and Exhaust Valves	3 - 2
2. 1 General Construction	3 - 2.1
2. 2 Replacing Consumables, Implements and Measuring Instruments	3 - 2.2

CONTENTS

2. 3 Disassembly of Intake and Exhaust Valves	3 - 2 . 3
2. 4 Inspection and Maintenance of Intake and Exhaust Valves	3 - 2 . 4
2. 5 Inspection and Maintenance of Valve Rotator	3 - 2 . 5
2. 6 Assembly of Intake and Exhaust Valves	3 - 2 . 6
3. Starting Valve	3 - 3
3. 1 General Construction	3 - 3 . 1
3. 2 Replacing Consumables, Implements and Measuring Instruments	3 - 3 . 2
3. 3 Disassembly of Starting Valve	3 - 3 . 3
3. 4 Inspection and Maintenance of Starting Valve	3 - 3 . 4
3. 5 Assembly of Starting Valve	3 - 3 . 5
4. Rocker Arm Device	3 - 4
4. 1 General Construction	3 - 4 . 1
4. 2 Replacing Consumables, Implements and Measuring Instruments	3 - 4 . 2
4. 3 Disassembly of Rocker Arm Device	3 - 4 . 3
4. 4 Inspection and Maintenance of Rocker Arm Device	3 - 4 . 4
4. 5 Assembly of Rocker Arm Device	3 - 4 . 5
5. Indicator and Safety Valve	3 - 5
5. 1 General Construction	3 - 5 . 1
5. 2 Replacing Consumables, Implements and Measuring Instruments	3 - 5 . 2
5. 3 Disassembly of Indicator and Safety Valve	3 - 5 . 3
5. 4 Inspection and Maintenance of Indicator and Safety Valve	3 - 5 . 4
5. 5 Assembly and Adjustment of Safety Valve	3 - 5 . 5
5. 6 Assembly and Mounting of Indicator and Safety Valve	3 - 5 . 6
◦ Fuel Oil Injection Valve ( : "Operation" 5-4.2)	
6. Nozzle Holder Guide	3 - 6
6. 1 Extraction of Nozzle Holder Guide	3 - 6 . 1
6. 2 Cooling of Nozzle Holder Guide	3 - 6 . 2
6. 3 Fitting-In of Nozzle Holder Guide	3 - 6 . 3
4. PISTON AND CONNECTING ROD	4
1. General Construction	4 - 1
2. Replacing Consumables, Implements and Measuring Instruments	4 - 2
3. Disassembly of Piston and Connecting Rod	4 - 3
3. 1 Extraction of Piston	4 - 3 . 1
3. 2 Disassembly of Connecting Rod Large end Part	4 - 3 . 2
4. Inspection and Maintenance of Piston and Connecting Rod	4 - 4
4. 1 Inspection and Maintenance of Piston	4 - 4 . 1
4. 2 Inspection and Maintenance of Ring	4 - 4 . 2
4. 3 Inspection and Maintenance of Connecting Rod	4 - 4 . 3
4. 4 Inspection and Maintenance of Crank Pin Shell	4 - 4 . 4
4. 5 Replacement of Connecting Rod Bolt	4 - 4 . 5

CONTENTS

5.	Assembly of Piston and Connecting Rod	4 - 5
5. 1	Assembly of Connecting Rod Large End Part.....	4 - 5. 1
5. 2	Assembly of Piston and Connecting Rod.....	4 - 5. 2
5. 3	Confirmation and Retightening of Connecting Rod Bolt.....	4 - 5. 3
5.	ENGINE FRAME AND CYLINDER LINER	5
1.	General Construction	5 - 1
2.	Replacing Consumables, Implements and Measuring Instruments	5 - 2
3.	Inspection and Maintenance of Cylinder Liner Inner Surface.....	5 - 3
4.	Extraction of Cylinder Liner	5 - 4
5.	Inspection and Maintenance of Cylinder Liner Outer Periphery and Engine Frame Jacket	5 - 5
6.	Mounting of Cylinder Liner	5 - 6
6.	MAIN BEARING AND THRUST BEARING	6
1.	General Construction	6 - 1
2.	Replacing Consumables, Implements and Measuring Instruments	6 - 2
3.	Main Bearing Shell.....	6 - 3
3. 1	Disassembly of Main Bearing Shell	6 - 3. 1
3. 2	Inspection and Maintenance of Main Bearing Shell	6 - 3. 2
3. 3	Assembly of Main Bearing Shell	6 - 3. 3
4.	Thrust Bearing	6 - 4
4. 1	Disassembly of Thrust Bearing	6 - 4. 1
4. 2	Maintenance of Thrust Bearing	6 - 4. 2
4. 3	Assembly of Thrust Bearing	6 - 4. 3
7.	CRANKSHAFT	7
1.	General Construction	7 - 1
2.	Replacing Consumables, Implements, and Measuring Instruments	7 - 2
3.	Inspection and Maintenance of Crankshaft	7 - 3
3.1	Inspection of Crank Pin	7 - 3. 1
3.2	Inspection of Crank Journal	7 - 3. 2
3.3	Inspection of Balance Weight Bolt Tightening Force.....	7 - 3. 3
3.4	Inspection of Rear Part Oil Cut Clearance.....	7 - 3. 4
4.	Measurement of Crankshaft Deflection	7 - 4
8.	TIMING GEAR AND CAMSHAFT	8
1.	Timing Gear	8 - 1
1.1	General Construction	8 - 1. 1
1.2	Replacing Consumables, Implements, and Measuring Instruments	8 - 1. 2
1.3	Disassembly of Idle Gear	8 - 1. 3



CONTENTS

1.4 Disassembly of Cam Gear	8 - 1 . 4
1.5 Inspection and Maintenance of Timing Gear	8 - 1 . 5
1.6 Assembly of Cam Gear	8 - 1 . 6
1.7 Assembly of Idle Gear	8 - 1 . 7
1.8 POWER-LOCK Operating Procedure	8 - 1 . 8
2. Camshaft	8 - 2
2. 1 General Construction	8 - 2 . 1
2. 2 Replacing Consumables, Implements, and Measuring Instruments	8 - 2 . 2
2. 3 Disassembly of Camshaft	8 - 2 . 3
2. 4 Inspection and Maintenance of Camshaft	8 - 2 . 4
2. 5 Assembly of Camshaft	8 - 2 . 5
2. 6 Inspection of Fuel Oil Cam Timing	8 - 2 . 6
2. 7 Adjustment of Fuel Oil Cam Timing (When replacing cam)	8 - 2 . 7
 9. F.O. INJECTION PUMP	 9
1. General Construction	9 - 1
2. Replacing Consumables, Implements and Measuring Instruments	9 - 2
3. Disassembly of F.O. Injection Pump and F.O. Injection Pump Tappet	9 - 3
4. F.O. Injection Pump	9 - 4
4. 1 Disassembly of F.O. Injection Pump	9 - 4 . 1
4. 2 Inspection and Maintenance of F.O. Injection Pump	9 - 4 . 2
4. 3 Assembly of F.O. Injection Pump	9 - 4 . 3
5. F.O. Injection Pump Tappet	9 - 5
5. 1 Disassembly of F.O. Injection Pump Tappet	9 - 5 . 1
5. 2 Inspection and Maintenance of F.O. Injection Pump Tappet	9 - 5 . 2
5. 3 Assembly of F.O. Injection Pump Tappet	9 - 5 . 3
6. Mounting of F.O. Injection Pump and F.O. Injection Pump Tappet	9 - 6
7. Adjustment of Maximum Combustion Pressure	9 - 7
8. Priming of F.O. Injection Pump	9 - 8
 10. VALVE OPERATING DEVICE	 10
1. General Construction	10 - 1
2. Replacing Consumables, Implements, and Measuring Instruments	10 - 2
3. Disassembly of Valve Operating Device	10 - 3
4. Inspection and Maintenance of Valve Operating Device	10 - 4
5. Assembly of Valve Operating Device	10 - 5
 11. GOVERNOR DRIVING DEVICE	 11
1. General Construction	11 - 1
2. Replacing Consumables, Implements, and Measuring Instruments	11 - 2
3. Disassembly of Governor Driving Device	11 - 3

CONTENTS

4. Inspection and Maintenance of Governor Driving Device	11-4
5. Assembly of Governor Driving Device	11-5
12. INTAKE AND EXHAUST DEVICES	12
1. Outline of Intake and Exhaust Devices	12-1
2. Turbocharger	12-2
3. Air Cooler	12-3
3. 1 General Construction	12-3.1
3. 2 Replacing Consumables, Implements, and Measuring Instruments	12-3.2
3. 3 Dismounting of Air Cooler	12-3.3
3. 4 Inspection and Maintenance of Air Cooler	12-3.4
3. 5 Mounting of Air Cooler	12-3.5
13. STARTING AIR SYSTEM	13
1. Outline of Starting Air System	13-1
2. Starting Air Valve	13-2
2. 1 General Construction	13-2.1
2. 2 Replacing Consumables, Implements, and Measuring Instruments	13-2.2
2. 3 Disassembly of Starting Air Valve	13-2.3
2. 4 Inspection and Maintenance of Starting Air Valve	13-2.4
2. 5 Assembly of Starting Air Valve	13-2.5
3. Starting Air Rotary Valve	13-3
3. 1 General Construction	13-3.1
3. 2 Replacing Consumables, Implements, and Measuring Instruments	13-3.2
3. 3 Disassembly of Starting Air Rotary Valve	13-3.3
3. 4 Inspection and Maintenance of Starting Air Rotary Valve	13-3.4
3. 5 Assembly of Starting Air Rotary Valve	13-3.5
4. Starting Air Rotary Valve and Handle Switch	13-4
4. 1 General Construction	13-4.1
14. FUEL OIL SYSTEM	14
1. Outline of Fuel Oil System	14-1
2. Fuel Oil Relief Valve	14-2
2. 1 General Construction	14-2.1
2. 2 Replacing Consumables, Implements, and Measuring Instruments	14-2.2
2. 3 Disassembly of Fuel Oil Relief Valve	14-2.3
2. 4 Inspection and Maintenance of Fuel Oil Relief Valve	14-2.4
2. 5 Assembly of Fuel Oil Relief Valve	14-2.5
3. Fuel Oil Feed Pump	14-3
3. 1 General Construction	14-3.1
3. 2 Replacing Consumables, Implements, and Measuring Instruments	14-3.2

CONTENTS

3. 3 Dismounting of Fuel Oil Feed Pump.....	14-3.3
3. 4 Disassembly of Fuel Oil Feed Pump	14-3.4
3. 5 Inspection and Maintenance of Fuel Oil Feed Pump	14-3.5
3. 6 Assembly of Fuel Oil Feed Pump.....	14-3.6
4. Fuel Oil Feed Pump Driving Device	14-4
4. 1 Disassembly of Fuel Oil Feed Pump Driving Device.....	14-4.1
4. 2 Maintenance and Assembly of Fuel Oil Feed Pump Drive Device.....	14-4.2
◦ Fuel Oil Filter ( : "Operation" 5-4.3)	
15. LUBRICATING OIL SYSTEM	15
1. Outline of Lubricating Oil System.....	15-1
2. Lubricating Oil Pump	15-2
2. 1 General Construction.....	15-2.1
2. 2 Replacing Consumables, Implements and Measuring Instruments.....	15-2.2
2. 3 Disassembly of Lubricating Oil Pump	15-2.3
2. 4 Inspection and Maintenance of Lubricating Oil Pump.....	15-2.4
2. 5 Assembly of Lubricating Oil Pump.....	15-2.5
3. Lubricating Oil Cooler	15-3
3. 1 General Construction.....	15-3.1
3. 2 Replacing Consumables, Implements and Measuring Instruments.....	15-3.2
3. 3 Inspection and Maintenance of Lubricating Oil Cooler.....	15-3.3
3. 4 Assembly of Lubricating Oil Cooler.....	15-3.4
4. Lubricating Oil Relief Valve.....	15-4
4. 1 General Construction.....	15-4.1
4. 2 Replacing Consumables, Implements, and Measuring Instruments	15-4.2
4. 3 Disassembly of Lubricating Oil Relief Valve	15-4.3
4. 4 Inspection and Maintenance of Lubricating Oil Relief Valve	15-4.4
4. 5 Assembly of Lubricating Oil Relief Valve	15-4.5
5. Lubricating Oil Temperature Control Valve	15-5
5. 1 General Construction.....	15-5.1
5. 2 Replacing Consumables, Implements, and Measuring Instruments	15-5.2
5. 3 Disassembly of Lubricating Oil Temperature Control Valve	15-5.3
5. 4 Inspection and Maintenance of Lubricating Oil Temperature Control Valve	15-5.4
5. 5 Assembly of Lubricating Oil Temperature Control Valve	15-5.5
( : "Operation" 5-3.2 "Manual Adjustment of Lubricating Oil Temperature")	
16. COOLING WATER SYSTEM	16
1. Outline of Cooling Water System.....	16-1
2. Cooling Water Pump	16-2
2. 1 General Construction.....	16-2.1
2. 2 Replacing Consumables, Implements and Measuring Instruments	16-2.2
2. 3 Disassembly of Cooling Water Pump.....	16-2.3



CONTENTS

2. 4 Inspection and Maintenance of Cooling Water Pump.....	16-2.4
2. 5 Assembly of Cooling Water Pump.....	16-2.5
3. Cooling Water Temperature Control Valve.....	16-3
3. 1 General Construction.....	16-3.1
 17. ENGINE CONTROL AND PROTECTIVE DEVICES	 17
1. Outline of Engine Control and Protective Devices.....	17-1
2. Fuel Oil Shutdown Device (G2 Type).....	17-2
2. 1 General Construction.....	17-2.1
2. 2 Replacing Consumables, Implements, and Measuring Instruments	17-2.2
2. 3 Disassembly of Fuel Oil Shutdown Device (G2 Type).....	17-2.3
2. 4 Inspection, Maintenance, and Assembly of Fuel oil Shutdown Device (G2 Type)	17-2.4
2. 5 Mounting and Adjustment of Fuel Oil Shutdown Device (G2 Type).....	17-2.5
3. Fuel Oil Shutdown Device (H2 Type).....	17-3
3. 1 General Construction.....	17-3.1
3. 2 Replacing Consumables, Implements, and Measuring Instruments	17-3.2
3. 3 Disassembly of Fuel Oil Shutdown Device (H2 Type).....	17-3.3
3. 4 Maintenance, Assembly, Mounting, and Adjustment of Fuel Oil Shutdown Device (H2 Type).....	17-3.4
4. Fuel Oil Shutdown Device (J2 Type)	17-4
4. 1 General Construction.....	17-4.1
4. 2 Replacing Consumables, Implements, and Measuring Instruments	17-4.2
4. 3 Disassembly of Fuel Oil Shutdown Device (J2 Type).....	17-4.3
4. 4 Maintenance and Assembly of Fuel Oil Shutdown Device (J2 Type)	17-4.4
4. 5 Mounting and Adjustment of Fuel Oil Shutdown Device (J2 Type)	17-4.5
 18. GAUGE BOARD	 18
1. Gauge Board.....	18-1
1. 1 General Construction.....	18-1.1
1. 2 Replacing Consumables, Implements, and Measuring Instruments	18-1.2
1. 3 Disassembly and Maintenance of Gauge Board.....	18-1.3
2. Seal Pot (Heavy Fuel Oil Specification)	18-2

Index for Parts List

Chapter	Title
0	Engine Outline and Equipment
1	Engine Conforming to NOx Technical Code
2	Piping System
3	Main Parts
4	Instrument & Accessories



CONTENTS

Chapter 0 Engine Outline and Equipment	0
1. Engine Outline and Equipment	0-1
2. Section of Engine	0-2
 Chapter 1 Engine Conforming to NOx Technical Code	 1
 Chapter 2 Piping System	 2
1. Garphices Symbols of Piping Standard Parts	2-1
2. Starting Air Piping	2-2
3. Fuel Oil Piping	2-3
4-1. Lubricating Oil Piping, Turbocharger Layout-Rear Turbocharger	2-4-1
4-2. Lubricating Oil Piping, Turbocharger Layout-Front Turbocharger	2-4-2
4-3. Lubricating Oil Piping (Lubricating Oil Cooler)	2-4-3
4.4. Lubricating Oil Piping, Turbocharger Layout-Rear Turbocharger TPS	2-4-4
5.1. Cooling Water Piping, Turbocharger Layout-Rear Turbocharger	2-5-1
5.2. Cooling Water Piping, Turbocharger Layout-Front Turbocharger	2-5-2
5.3. Cooling Water Piping, Turbocharger Layout-Rear Turbocharger, TPS	2-5-3
6. Fuel Oil Piping(Leak Oil Return)	2-6
7. Thermometer	2-7
8. Nozzle Cooling Water Piping	2-8
 Chapter 3 Main Parts	 3
1. Engine Frame	3-1
2. Engine Frame Side & Blind Cover	3-2
3. Engine Frame Safety Valve	3-3
4. Oil Pan	3-4-1
5.1. Crankshaft, Balance Weight, Flywheel & Main Bearing	3-4-2
6. Idle Gear	3-4-3
7. Camshaft & Camshaft Bearing	3-4-4
8. Oil Pump Driving Gear	3-5-1
9. Starting Air Rotary Valve	3-5-2
10. Control Rod	3-5-3
11. Piston & Connecting Rod	3-6
12. Cylinder Line	3-7
13. Cylinder Head	3-8
14. Intake Valve	3-5-3
15. Exhaust Valve	3-6
16. Rocker Arm	3-7



CONTENTS

17.	Starting Air Valve	3-17
18.1.	Fuel Oil Injection Device	3-18-1
18.2.	Fuel Oil Injection Device(Fuel Oil Nozzle Holder)	3-18-2
19.	Indicator & Safety Valve	3-19
20.	Cylinder Head Cover	3-20
21.	Intake, Exhaust, Tappet & Push Rod	3-21
22.	Fuel Oil Pump Tappet	3-22
23.	Fuel Oil Injection Pump	3-23
24.1.	Governor Fitting(RHD)	3-24-1
24.2.	Governor Fitting(UG)	3-24-2
25.	Governor Link(RHD)	3-25
25.2.	Governor Link(UG)	3-25-2
26.	Operating Device	3-26
27.1A.	Exhaust Manifold(Rear Turbocharger, Gas Inlet 1 Entry)	3-27-1A
27.2.	Exhaust Manifold(6DK, Front Turbocharger, Gas Inlet 1 Entry)	3-27-2
27.3.	Exhaust Manifold(6DK, Rear Turbocharger, Gas Inlet 2 Entry)	3-27-3
27.4.	Exhaust Manifold(8DK, Front Turbocharger, Gas Inlet 1 Entry)	3-27-4
28.1A.	Exhaust Manifold Cover(Rear Turbocharger, Gas Inlet 1 Entry)	3-28-1A
28.2.	Exhaust Manifold Cover(6DK, Front Turbocharger, Gas Inlet 1 Entry)	3-28-2
28.3.	Exhaust Manifold Cover(6DK, Rear Turbocharger, Gas Inlet 2 Entry)	3-28-3
28.4.	Exhaust Manifold Cover(8DK, Front Turbocharger, Gas Inlet 1 Entry)	3-28-4
29.1.	Turbocharger, Aircooler Fitting(6DK, Rear Turbocharger, Gas Inlet 1 Entry)	3-29-1
29.2.	Turbocharger, Aircooler Fitting(6DK, Front Turbocharger, Gas Inlet 1 Entry)	3-29-2
29.3.	Turbocharger, Aircooler Fitting(6DK, Rear Turbocharger, Gas Inlet 2 Entry)	3-29-3
29.4.	Turbocharger, Aircooler Fitting(8DK, Rear Turbocharger, Gas Inlet 1 Entry)	3-29-4
29.5.	Turbocharger, Aircooler Fitting(8DK, Front Turbocharger, Gas Inlet 1 Entry)	3-29-5
29.6.	Turbocharger(TPS), Aircooler Fitting (6DK, Rear Turbocharger, Gas Inlet 1 Entry)	3-29-6
29.7.	Turbocharger(TPS), Aircooler Fitting (8DK, Rear Turbocharger, Gas Inlet 1 Entry)	3-29-7
30.	Heat Box	3-30
Chapter 4 Instrument & Accessories		4
1.	Starting Air Valve & Starting Air Control Valve	4-1
1.1.1.	Starting Air Valve & Starting Air Control Valve	4-1-1-1
1.1.2.	Starting Air Valve Fitting	4-1-1-2
1.1.3.	Starting Air Operation Valve Fitting	4-1-1-3
1.2.	Safety Plug, Starting Air Pipe	4-1-2
2.	Fuel Oil System	4-2
2.1.1.	Fuel Oil Feed Pump	4-2-1-1

CONTENTS

2.1.2. Fuel Oil Pump Driving Device	4-2-1-2
2.2.1. Fuel Oil Filter	4-2-2-1
2.2.2. Fuel Oil Filter & Fitting	4-2-2-2
2.3. Fuel Oil Relief Valve	4-2-3
2.4.2. Level Switch Box(With Lead-Switch).....	4-2-4-2
2.5.1. Check Valve	4-2-5-1
3. Lubricating Oil System	4-3
3.1. Lubricating Oil Pump	4-3-1
3.2.1. Lubricating Oil Cooler 400 Type	4-3-2-1
3.2.2. Lubricating Oil Cooler 500 Type	4-3-2-2
3.3. Lubricating Oil Relief Valve	4-3-3
3.4.1. Lubricating Oil Filter	4-3-4-1
3.4.2. Lubricating Oil Filter & Fitting (Without Relief Valve)	4-3-4-2
3.4.3. Lubricating Oil Filter & Fitting (With Relief Valve)	4-3-4-3
3.5.1. Turbocharger(MET) Lubricating Oil Filter	4-3-5-1
3.5.2. Turbocharger(MET) Lubricating Oil Filter Filtting(Rear Turbocharger)	4-3-5-2
3.5.3. Turbocharger(MET) Lubricating Oil Filter Filtting(Front Turbocharger)	4-3-5-3
3.5.4. Turbocharger(TPS) Lubricating Oil Filter	4-3-5-4
3.5.5. Turbocharger(TPS) Lubricating Oil Filter Filtting(Rear Turbocharger)	4-3-5-5
4. Cooling Water System	4-4
4.1. Cooling Water Pump	4-4-1
5. Nozzle Cooling Oil System	4-5
5.1.1. Nozzle Cooling Oil Pump	4-5-1-1
5.1.2. Nozzle Cooling Oil Pump Fitting	4-5-1-2
6. Gauge Board	4-6
6.1. Gauge Board	4-6-1
7. Protective Device	4-7
7.1. Fuel Oil Shutdown & Control Piston Device G2 Type	4-7-1
7.2. Fuel Oil Shutdown & Control Piston Device H2 Type	4-7-2
7.3. Fuel Oil Shutdown & Control Piston Device J2 Type	4-7-3
7.4. Fuel Oil Shutdown Device Fitting	4-7-4
7.5. Pulse Sensor(With Amplifier)	4-7-5
7.6. Minilator	4-7-8
7.7. Seal Pot Fitting	4-7-7
8. Tools & Implement	4-8
8.1. Flywheel Turning Device	4-8-1
8.2.1. Blower Cleaning Parts(MET)	4-8-2-1
8.2.2. Blower Cleaning Parts(TPS)	4-8-2-2



CONTENTS

8.3. Oil Press, Ram(Hanger Type)	4-8-3
8.4.1. Oil Press, Jack(Head)	4-8-4-1
8.4.2. Oil Press, Ram(Cap)	4-8-4-2
8.4.3. Oil Press, Ram(Rod/Side Bolt)	4-8-4-3
8.5.1. Engine Lifting Tool(6DK)	4-8-5-1
8.5.2. Engine Lifting Tool(8DK)	4-8-5-2