



FOP VIKTOR KNYAZYEV

Ap.62, Ak. Glushka 6, Odessa. 65113 Ukraine.

Registration no. 2 556 000 0000 139668 / Tax. no. 1869801971

Spare parts: <http://brovertek.com> | Tech Library: <http://engine.od.ua> | Mariners support: <http://MarEngine.com>

Big Library of the Sounded Books for Children in English <http://babyenglish.gift>

E-mail: broverter@gmail.com / babyenglish.best@gmail.com / Phone: 38 0674831710

INVOICE-OFFER No SET # 20 MAN B&W 2-stroke diesel engines

Date:

To: Company name

Address (optional)

Country

line	Description	Amount USD
	SET # 40 MAN B&W 2-stroke diesel engines	
1	26-42 MC Instruction manual for MAN B&W diesel engines 26-42 MC type. Volume I. Operation.	free
2	S26MC MAN B&W Instruction manual for S26MC type diesel engines. Volume II. Maintenance. Edition 5.	52
3	S26MC Instructions for S26MC MAN B&W engines. Volume III. Components descriptions (Spare Parts Catalog). Edition 5.	48
4	26-42 MC Instruction manual for MAN B&W diesel engines 26-42 MC type. Volume I. Operation.	free
5	35-42MC Instruction manual for MAN B&W diesel engines 35-42 MC type. Volume I. Operation. Edition 42B. 1999 year.	free
6	L35MC Instructions for L35MC MAN B&W engines. Volume II. Maintenance. Edition 8.	52
7	L35MC Instructions for L35MC MAN B&W engines. Volume III. Components description. Edition 8. (Spare Parts Catalog).	48
8	L35MC Instructions for L35MC MAN B&W engines. Volume II. Maintenance. Edition 2.	52
9	L35MC Instructions for L35MC MAN B&W engines. Volume III. Components description. Edition 2. (Spare Parts Catalog).	48
10	S35MC Instructions for S35MC MAN B&W engines. Volume II. Maintenance. Edition 4.	52
11	S35MC Instructions for S35MC MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 4.	48
12	26-42 MC Instruction manual for MAN B&W diesel engines 26-42 MC type. Volume I. Operations Instruction.	free
13	L42MC Instructions for L42MC MAN B&W engines. Volume II. Maintenance. Edition 4.	52
14	L42MC Instructions for L42MC MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 4.	48
15	L42MC BMZ (Bryansk Machine-building Factory) 6 DKRN 42/136-10 (MAN licenser L42MC). Operating Instruction DB32 - IE.	free
16	L42MC BMZ 6 DKRN 42/136-10 (L42MC). Maintenance DB34 - IO.	52
17	L42MC BMZ 6 DKRN 42/136-10 (L42MC). DB34. Components description (Spare Parts List and Illustration)	48
18	S42MC Instructions for S42MC MAN B&W engines. Volume II. Maintenance. Edition 2.	52
19	S42MC Instructions for S42MC MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 2.	48
20	46-98MC Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40D. Operation.	free

21	46-98MC	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40E. Operation.	free
22	46-98MC	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40F. Operation.	free
23	S46MC-C	Instructions for S46MC-C MAN B&W engines. Volume II. Maintenance. Edition 1.	52
24	S46MC-C	Instructions for S46MC-C MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 1.	48
25	S46MC-C	STX 6S46MC-C (MAN licenser). Vol. 1-5 Operation. Maintenance. Components Description (spare parts catalogue). Accessories instructions with spare Parts Catalogs, Final Drawings with Spare Parts Lists.	100
Operation Instruction - MAN B&W 50-108 MC / MC-C / ME / ME-C diesel engine			
26	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40D. Operation manual.	free
27	46-98MC / MC-C Mitsui	Instructions for MITSUI MAN B&W MC and MC-C engines. Volume I. Operation and Data manual.	free
28	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 002. 2004. Operation manual.	free
29	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 004. 2006. Operation manual.	free
30	50-108 ME / ME-C	Instructions for 50-108ME / ME-C MAN B&W engines. Volume I. Edition 003. Operation manual.	free
Man B&W L50MC diesel engine			
31	L50MC	Instructions for L50MC MAN B&W engines. Volume II. Maintenance. Edition 5.	52
32	L50MC	Instructions for L50MC MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 5.	48
33	L50MC/MCE	Instructions for L50MC, L50MCE MAN B&W engines. Volume II. Maintenance. Edition 3.	52
34	L50MC	Instructions for L50MC MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 4.	48
35	L50MC	Instructions for L50MC MAN B&W engines. Volume II. Maintenance. Edition 4.	52
36	L50MC/MCE	Instructions for L50MC / L50MCE MAN B&W engines. Volume II. Maintenance. Edition 2.	52
37	L50MC Mitsui	Mitsui (MAN B&W) L50MC diesel engine - Parts Catalog.	48
Man B&W S50MC diesel engine			
38	S50MC	Instructions for S50MC MAN B&W engines. Volume II. Maintenance. Edition 8.	52
39	S50MC	Instructions for S50MC MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 8.	48
40	S50MC Mitsui	Mitsui (MAN B&W) S50MC diesel engine - Parts Catalog.	48
Man B&W S50MC-C diesel engine			
41	S50MC-C	Instructions for S50MC-C MAN B&W engines. Volume II. Maintenance. Edition 10.	52
42	S50MC-C	Instructions for S50MC-C MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 10.	48
43	S50MC-C	Instructions for S50MC-C MAN B&W diesel engine. Volume I - Operations. Volume II - Maintenance. Volume 3 - Volume III. Components description (spare parts catalogue). Edition 10. DISK. Save 10 USD.	100
44	S50MC-C	Instructions for S50MC-C MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 2.	48
45	S50MC-C	Instructions for S50MC-C MAN B&W engines. Volume II. Maintenance. Edition 4.	52

46	S50MC-C	Instructions for S50MC-C MAN B&W engines. Volume III. Components description (Spare Parts Catalog). Edition 4.	48
47	S50MC-C Kawasaki	KAWASAKI S50MC-C diesel engines (MAN B&W licensor). Volume I - Operations Instructions. Volume II - Maintenance Manual. Volume III - Components description (spare parts catalogue)	100
48	S50MC-C Hyundai	HYUNDAI S50MC-C diesel engines (MAN B&W licensor). Volume I - Operations Instructions. Volume II - Maintenance Manual. Volume III - Components description (spare parts catalogue). Final drawings (see content below). Fitting and Accessories with spare parts list include sketches with dimensions (see content below). BRIDGE MANOEUVRING SYSTEM & FINAL DRAWING (PRAXIS) for MAN 50MC-C diesel.	100
Operation Instruction - MAN B&W 50-108 MC / MC-C / ME / ME-C diesel engine			
49	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40D. Operations manual.	free
50	46-98MC / MC-C	Instructions for MITSUI MAN B&W MC and MC-C engines. Volume I. Operation and Data manual.	free
51	50-98MC / MC-C	Instructions for 50-98MC / MC-C MAN B&W engines. Volume I. Edition 002. Operations manual.	free
52	50-108 ME / ME-C	Instructions for 50-98ME / ME-C MAN B&W engines. Volume I. Edition 003. Operations manual.	free
53	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 002. 2004. Operation manual.	free
54	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 004. 2006. Operation manual.	free
55	50-108 ME / ME-C	Instructions for 50-108ME / ME-C MAN B&W engines. Volume I. Edition 003. Operation manual.	free
MAN B&W L60MC diesel engine			
56	L60MC	Instructions for L60MC MAN B&W engines. Volume II. Maintenance. Edition 9.	52
57	L60MC	Instructions for L60MC MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 9.	48
58	L60MC	BMZ (Bryansk Machine-building Factory) DKRN 60/195-10 (MAN licensor L60MC). Components description (Spare Parts List and Illustration) - DB32. RUSSIAN and ENGLISH LANGUAGE.	48
MAN S60MC diesel engine			
59	S60MC	Instructions for S60MC MAN B&W engines. Volume II. Maintenance. Edition 6.	52
60	S60MC	Instructions for S60MC MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 6..	48
61	S60MC	Instructions for S60MC MAN B&W engines. Volume II. Maintenance. Edition 5.	52
62	S60MC	Instructions for S60MC MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 5.	48
63	S60MC	HSD (was established by Hanjung, Samsung and Daewoo) 6S60MC Engines MAN licensor. Vol.1-5 - Operation Instructions, Maintenance Manual, Components discription (Spare parts catalogue) and Accessories with spare parts lists.	100
64	S60MC	BMZ 6DKRN 60/229-13 mark V (MAN B&W licencer 6S60MC) - Components and Description (Spare parts Catalog).	48
MAN B&W S60MC-C diesel engine			
65	S60MC-C	Instruction for 60MC-C MAN B&W engine - Operation Instructions, Maintenance Manual, Components discription (Spare parts catalogue).	48

66	S60MC-C	Instructions for S60MC-C MAN B&W engines. Volume II. Maintenance. Edition 1.	52
67	S60MC-C	HYUNDAI S60MC-C diesel engines. Volume I - Operations Instructions. Volume II - Maintenance Manual. Volume III - Components description (Spare Parts Catalog). HYUNDAI 6S60MC-C Mk7 - Spare parts catalog with Drawings include spares dimensions and weight.	100
68	S60MC-C	DOOSAN 7S60MC-C diesel engines. Volume I - Operations Instructions. Volume II - Maintenance Manual. Volume III - Components description (Spare Parts Catalog). Volume IV & Volume V - Accessories. See content below. 60ME / ME-C Electronic and Camshaft Controlled MAN B&W Diesel Engines	100
69	S60ME-C	MAN B&W S60ME-C Electronic Controlled Diesel Engine -Volume II - Maintenance Manual. Volume III - Components description (Spare Parts Catalog). Volume IV & V - Accessories Instructions, Drawings.	100
70	S60ME-C8	MAN B&W S60ME-C8 Engines. Volume I - Operations Instructions. Volume II - Maintenance Manual. Volume III - Components description (Spare Parts Catalog). Volume IV Part 1 - Accessories Instructions. Volume IV Part 2 - Drawings, Spare parts & Tools Lists. Laying-up of vessels. Operation Instruction - MAN B&W 50-108 MC / MC-C / ME / ME-C diesel engine	100
71	26-42MC	Instruction manual for MAN B&W diesel engines 26-42 MC type. Volume I. Operation Instruction.	free
72	35-42MC	Instruction manual for MAN B&W diesel engines 35-42 MC type. Volume I. Operation Instruction. Edition 42B 1999.	free
73	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40D. Operation manual.	free
74	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40E. Operations manual.	free
75	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40F. Operations manual.	free
76	46-98MC / MC-C	Instructions for MITSUI MAN B&W MC and MC-C engines. Volume I. Operation and Data manual.	free
77	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 002. 2004. Operation manual.	free
78	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 004. 2006. Operation manual.	free
79	50-108 ME / ME-C	Instructions for 50-108ME / ME-C MAN B&W engines. Volume I. Edition 003. Operation manual. MAN B&W L70MC diesel engine	free
80	L70MC	Instructions for L70MC MAN B&W engines. Volume II. Edition 6. Maintenance.	52
81	L70MC	Instructions for L70MC MAN B&W engines. Volume III. Edition 6. Components description (Spare Parts Catalogue).	48
82	L70MC	Instructions for L70MC MAN B&W diesel engines. Volume I - Operations. Volume II - Maintenance. Volume III - Components description (Spare Parts Catalogue). DISC. Save 24 USD.	100
83	L70MC	Instructions for L70MC/MCE MAN B&W engines. Volume II. Maintenance Manual. Edition 3. MAN B&W S70MC / S70MC-C diesel engine	52
84	S70MC	Instructions for S70MC MAN B&W engines. Volume II. Maintenance. Edition 5.	52
85	S70MC	Instructions for S70MC MAN B&W engines. Volume III. Components description. Edition 5.	48

86	S70MC	Instructions for S70MC MAN B&W engines. Volume II. Maintenance. Edition 4.	52
87	S70MC	Instructions for S70MC MAN B&W engines. Volume III. Components description. Edition 4.	48
88	S70MC	Instructions for S70MC MAN B&W engines. Volume II. Maintenance. Edition 3.	52
89	S70MC	Instructions for S70MC MAN B&W engines. Volume III. Components description. Edition 3.	48
90	S70MC-C	Instructions for B&W 6S70MC-C (HSD made) - Volume I-V. Operation, Maintenance, Spare parts, Accessories. See content below.	100
70ME / ME-C Electronic and Camshaft Controlled MAN B&W Diesel Engines			
91	S70ME-C	DOOSAN (MAN B&W licencer) S70ME-C Electronic Controlled Two-stroke Engines Instructions - Volume I-V. Operation, Maintenance, Spare parts, Accessories, Drawings.	100
Operation Instruction - MAN B&W 26-108 MC / MC-C / ME / ME-C diesel engine			
92	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40D. Operation manual.	free
93	46-98MC / MC-C	Instructions for MITSUI MAN B&W MC and MC-C engines. Volume I. Operation and Data manual.	free
94	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 002. 2004. Operation manual.	free
95	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 004. 2006. Operation manual.	free
96	50-108 ME / ME-C	Instructions for 50-108ME / ME-C MAN B&W engines. Volume I. Edition 003. Operation manual.	free
MAN B&W L80MC engine			
97	L80MC	Instructions for L80MC MAN B&W engines. Volume II. Maintenance. Edition 4.	52
98	L80MC	Instructions for L80MC MAN B&W engines. Volume III. Components description (Spare parts Catalog). Edition 4.	48
MAN B&W S80MC engine			
99	S80MC	Instructions for S80MC MAN B&W engines. Volume II. Maintenance. Edition 4.	52
100	S80MC	Instructions for S80MC MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 4.	48
MAN B&W K80MC / K80MCE engine			
101	K80MC / K80MCE	Instructions for K80MC-MCE MAN B&W engines. Volume II. Maintenance. Edition 1.	52
102	K80MC / K80MCE	Instructions for K80MC-MCE MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 1.	48
MAN B&W K80MC-C engine			
103	K80MC-C	Instructions for K80MC-C MAN B&W engines. Volume II. Maintenance. Edition 2.	52
104	K80MC-C	Instructions for K80MC-C MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 2.	48
105	K80ME Electronic and Camshaft Controlled MAN B&W Diesel Engines		
106	K80ME-C	HUYNDAI (MAN B&W) 8K80ME-C Electronic Controlled Two-stroke Engines - Full Set of Manuals (Vol I-V) with Spare parts and Drawings. See content below.	100
Operation Instruction - MAN B&W 50-108 MC / MC-C / ME / ME-C diesel engine			
107	26-42MC	Instruction manual for MAN B&W diesel engines 26-42 MC type. Volume I. Operation Instruction.	free

108	35-42MC	Instruction manual for MAN B&W diesel engines 35-42 MC type. Volume I. Operation Instruction. Edition 42B 1999.	free
109	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40D. Operation manual.	free
110	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40E. Operations manual.	free
111	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40F. Operations manual.	free
112	46-98MC / MC-C	Instructions for MITSUI MAN B&W MC and MC-C engines. Volume I. Operation and Data manual.	free
113	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 002. 2004. Operation manual.	free
114	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 004. 2006. Operation manual.	free
115	50-108 ME / ME-C	Instructions for 50-108ME / ME-C MAN B&W engines. Volume I. Edition 003. Operation manual.	free
		MAN B&W L90MC engine	
116	L90MC	Instructions for L90MC MAN B&W engines. Volume II. Maintenance. Edition 2.	52
117	L90MC	Instructions for L90MC MAN B&W engines. Volume III. Components description (Spare parts Catalog). Edition 2.	48
		MAN B&W S90MC-C engine	
118	S90MC-C	Instructions for S90MC-C MAN B&W engines. Volume II. Maintenance. Edition 1.	52
119	S90MC-C	Instructions for S90MC-C MAN B&W engines. Volume III. Components description (Spare parts Catalogue). Edition 1.	48
		MAN B&W K90MC engine	
120	K90MC	Instructions for K90MC MAN B&W engines. Volume II. Maintenance. Edition 4.	52
121	K90MC	Instructions for K90MC MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 4.	48
		MAN B&W K90MC-C engine	
122	K90MC-C	Instructions for K90MC-C MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 3.	48
123	K90MC-C	Instructions for HYUNDAI 9K90MC-C Mk6 and L27/38 diesel generator - Full set of Manuals. Volume I - Operation Instructions, Volume II - Maintenance Manual, Volume III - Components description (Spare Parts Catalogue), Volume IV & V Accessories & Drawings. Watch Video below.	100
124	K90MC-C	Instructions for HYUNDAI 9K90MC-C engine - Full set of Manuals. Volume I - Operation Instructions, Volume II - Maintenance Manual, Volume III - Components description (Spare Parts Catalogue), Volume IV & V Accessories & Drawings.	100
125	K90MC-C	Instructions for HSD 9K90MC-C engine - Full set of Manuals. Volume I - Operation Instructions, Volume II - Maintenance Manual, Volume III - Components description (Spare Parts Catalogue), Volume IV & V Accessories & Drawings.	100
		Operation Instruction - MAN B&W 50-108 MC / MC-C / ME / ME-C diesel engine	
126	26-42MC	Instruction manual for MAN B&W diesel engines 26-42 MC type. Volume I. Operation Instruction.	free
127	35-42MC	Instruction manual for MAN B&W diesel engines 35-42 MC type. Volume I. Operation Instruction. Edition 42B 1999.	free
128	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40D. Operation manual.	free

129	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40E. Operations manual.	free
130	46-98MC / MC-C	Instructions for 46-98MC MAN B&W engines. Volume I. Edition 40F. Operations manual.	free
131	46-98MC / MC-C	Instructions for MITSUI MAN B&W MC and MC-C engines. Volume I. Operation and Data manual.	free
132	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 002. 2004. Operation manual.	free
133	50-108 MC / MC-C	Instructions for 50-108MC / MC-C MAN B&W engines. Volume I. Edition 004. 2006. Operation manual.	free
134	50-108 ME / ME-C	Instructions for 50-108ME / ME-C MAN B&W engines. Volume I. Edition 003. Operation manual.	free
MAN B&W K98MC engine			
135	K98MC	Instructions for K98MC MAN B&W engines. Volume II. Maintenance. Edition 11.	52
136	K98MC	Instructions for K98MC MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 11.	48
137	K98MC	Instructions for K98MC MAN B&W engines. Volume I - Operation Instructions, Volume II - Maintenance Manual, Volume III - Components description (Spare Parts Catalogue). Edition 11. DISC. Save 10 USD.	100
MAN B&W K98MC-C engine			
138	K98MC-C	Instructions for K98MC-C MAN B&W engines. Volume II. Maintenance. Edition 1.	52
139	K98MC-C	Instructions for K98MC-C MAN B&W engines. Volume III. Components description (Spare Parts Catalogue). Edition 1.	48
140	K98MC-C	HSD 12K98MC-C diesel engine. Vol.1-5 - Operation Instructions, Maintenance Manual, Components Discription (Spare Parts Catalogue) and Accessories with spare parts lists.	100
141	K98MC-C	HYUNDAI 12K98MC-C diesel engine. Vol.1-5 - Operation Instructions, Maintenance Manual, Components Discription (Spare Parts Catalogue) and Accessories with spare parts lists.	100
K98ME / K98ME-C Electronic and Camshaft Controlled MAN B&W Diesel Engines			
142	K98ME	MAN B&W K98ME Electronic Controlled Two-stroke Engines Instructions - Volume I Operation, Volume 2 Maintenance, Volume 3 Spare parts, Guidance Values Automation.	100
143	K98ME-C	DOOSAN (MAN B&W licencer) K98ME-C Electronic Controlled Two-stroke Engines Instructions - Volume I-V. Operation, Maintenance, Spare parts, Accessories.	100
			Total: 5544
			Bulk discount 85%: -4712
			Delivery (download): 0
			Total Amount for payment USD: 832

Terms of payment: Prepayment with company order

PAYMENT WAYS

See details on: <http://engine.od.ua/payment>

or in PDF file: [PDF-Way-of-payment-VAK.pdf](#)