



FOP VIKTOR KNYAZYEV

Ap.62, Ak. Glushka 6, Odessa. 65113 Ukraine.

Registartion no. 2 556 000 0000 139668 / Tax. no. 1869801971

Spare parts: <http://brovertek.com> | Tech Library: <http://engine.od.ua> | Mariners support: <http://MarEngine.com>

Big Library of the Sounded Books for Children in English <http://babyenglish.gift>

E-mail: broverter@gmail.com / babyenglish.best@gmail.com / Phone: 38 0674831710

INVOICE-OFFER No SET 38 Turbochargers

Date:

To: Company name

Address (optional)

Country

line	Description	Amount USD
	<u>MAN diesel & turbo Turbochargers</u>	
1	NA48/S MAN (Kawasaki MAN B&W) turbocharger NA48/S Operating manual with spare parts list. 90 pages.	18
2	NA57T9 MAN NA 57/T9 Turbocharger - Instruction for Operation and Maintenance. Working instructions, Work Cards & Spare Parts List.	18
3	NR15/R NR 15/R MAN EXHAUST-GAS TURBOOHARGER (install on diesel engine 5 and 6 cyl. L23/30): Operating Manual, Working Instructions (Maintenance instructions), Spare Parts Catalogue (list of Assemblies and List of spare parts with sketch). Air coller (Dong HWA) Instruction. Expansion Joint for T/C outlet drawing with all figures. Drawings - Silencer with spark arrestor and turbocharger cleaning hose.	18
4	NR17/S NR 17/S MAN EXHAUST-GAS TURBOOHARGER (install on diesel engine L21/31): Operating Manual, Working Instructions (Maintenance instructions), Spare Parts Catalogue (list of Assemblies and List of spare parts).	18
	Mitsubishi Turbochargers	
5	MET53SD MET53SD Mitsubishi Exhaust-Gas Turbocharger - INSTRUCTION BOOK Operation, Maintenance and Servicing, Part Number, Drawings. Specification MET 53SD - Description, Material specification, Cross Section, Assembly Drawing with all dimensions, Slinging procedure for overhaul, Tachometer installation drawing, Lubricating oil system, Arrangement of the dry cleaning device (drawing), Acceptable forces and moments on gas outlet flange, List of tools and spare parts with sketches.	22
6	MET 66SE MET 66SE INSTRUCTION BOOK for MITSUBISHI EXHAUST-GAS TURBOOHARGER: Outline description, Installation and Piping, Operation, Maintenance and Servicing, Part Number, Drawings. Frequency Converter for Turbocharger. Tachometer Set for Turbo- Charger (Digital) 73R-AC-Cset and 73-DC-Cset types.	22
7	MET SE83 Bearing removal on Mitsubishi MET SE 83 Turbocharger. Free load.	
	Yanmar Turbochargers	

8	RH133, RH143, RH163, RH183, RH203	Yanmar Exhaust Gas Turbocharger RH133 (Foot in Bearing Housing) and RH133 Version Y (Bearing housing with foot / Semi- float bearing), RH143 / RH163 and RH143 / RH163 Version Y, RH183 / RH203 and RH183 / RH203 Version Y - Instructions for Operation and Maintenance. Spare parts order form. VIDEO Step by Step Instructions - Removing from engine, Disassembly, Cleaning, Re-Assembly, Installing onto Engine. Disc. Installation is not requiry.	38
		Napier Turbochargers	
9	295	Napier 295 turbocharger Instruction manual & Spare parts list. 106 pages.	36
10	297 & 357	Napier 297 & 357 turbocharger Instruction manual & Spare parts list. 101 pages. Publication TB2971, issue 2, May 98.	36
11	297 & 357	Napier 297 & 357 turbocharger Instruction manual & Spare parts list. 122 pages. Publication TB2971, issue 3, June 99.	free
12	307	Napier turbocharger 307 Turbocharger Operator?s Manual 76 pages. Publication TB 3102 October 2010 (Issue 3)	36
13	307	Napier 307 Turbocharger Service Manual. Publication TB 3104 January 2011 (Issue 2)	free
14	355	Napier 355 turbocharger Instruction manual & Spare parts list. 94 pages.	36
15	357	Napier 357 Turbocharger & GEA Air Cooler - Instruction for Operation and Maintenance. Spare Parts List.	36
16	457	Napier 457 turbocharger Instruction manual & Spare parts list. 166 pages.	36
		KBB Turbochargers	
17	H3	Turbocharger H3. Instruction for Operation and Maintenance. Spare parts List.	22
18	H5, H6, H7	Turbocharger H5, H6, H7. Instruction for Operation and Maintenance. Spare parts List.	22
19	R3-2	KBB R3-2 Turbocharger for MaK 6 M20 - Operation, Maintenance & Spare Parts.	32
20	R4-3	KBB R4-3 Turbocharger for MaK 8 M20 - Operation, Maintenance & Spare Parts.	32
21	HPR3000	KBB Exhaust Gas Turbocharger HPR3000 - Instruction for Operation and Maintenance. Spare Parts and Tools List. Expansion Joint for T/C outlet drawing with all figures. Drawings - Silencer with spark arrestor and turbocharger cleaning hose.	32
22	HPR4000	KBB Exhaust Gas Turbocharger HPR3000 - Instruction for Operation and Maintenance. Spare Parts and Tools List.	32
23	HPR6000	KBB Exhaust Gas Turbocharger HPR6000 - Instruction for Operation and Maintenance. Spare Parts and Tools List.	32
		Total:	574
		Bulk discount 70%:	-402
		Delivery (download):	0
		Total Amount for payment USD:	172

Terms of payment: Prepayment with company order

PAYMENT WAYS

See details on: <http://engine.od.ua/payment>

or in PDF file: <PDF-Way-of-payment-VAK.pdf>