# INSTRUCTION BOOK VOLUME I

# Engine type L27/38

✓ Hyundai Heavy Industries Co., Ltd.
 Engine & Machinery Division
 1, Cheonha-Dong, Dong-Ku, Ulsan, Korea http://www.hhi.co.kr
 http:// as.hyundai-engine.com

Engine After Service Dept.

TEL: (82) 52-230-7412~20

FAX: (82) 52-230-7581

(82) 52-250-9841

E-mail: engineas@hhi.co.kr

Engine Parts Sales Dept. TEL: (82) 52-230-7311~20

FAX: (82) 52-230-7582

E-mail: eservice@hhi.co.kr

This book must in no case be wholly or partially copied and published or passed to unauthorized persons without the permission of HYUN-DAI HEAVY INDUSTRIES CO., LTD. ENGINE & MACHINERY DIVISION.

Page 1 (2)

### **Project Particulars**

L27/38

		: Applied : Not applied
	Operation of Engine (Plate no. 501)	
	501-1. Operation a) Woodward made	- 501.01 Ed.11H
	b) Europa made	· 501.01 Ed.08H
	Trouble Tracing (Plate no. 503)	
	503-1. Trouble Shooting Guide for Air Starter  a) Gali made	- 503.06 Ed.06H
	b) TDI made	
LJ	, 	
	Cylinder Head (Plate no. 505)	
	505-1. Cylinder Head	E0E04 0EE4
	a) Two piece sleeve	
	b) One piece sleeve	50501-05E
	Control and Safety Systems (Plate no. 509)	
	509-1. Governor and Governor Drive a) Woodward made	- 501.01 Ed.11H
	b) Europa made	· 501.01 Ed.08H
	509-2. Manual for Governor a) Woodward made ( UG 15D )	
	b) Europa made	
	Crankshaft and Main Bearings (Plate no. 510)	
	a) Geislinger made	510-04.00 Ed.06H
	b) Vulkan made	510-04.00 Ed.04H
	510-2. Vibration Damper with Attachment  a) Geislinger made	51004-07H
	b) Vulkan made	51004-05H

## **Project Particulars**

L27/38

#### Turbocharger system (Plate no. 512)

- 512-1. Manual for Turbocharger
  - a) NR20/S (FOR 5,6L27/38)
  - b) NR24/S (FOR 7,8L27/38)
  - c) NR29/S (FOR 9L27/38)

#### Compressed Air System (Plate no. 513)

513-1. Overhaul, Test and Inspection of Air Starter  a) Gali made	513-01.30 Ed.05H
b) TDI made	
513-2. Turning Gear a) Manual turning gear	513-25.00 Ed.02H
b) Electric turning gear	513-25.00 Ed.01H
513-3. Air Starter a) Gali made (Starter serial no. > 02-0101)	51309-11H 51309-13H
b) TDI made for Output gear ratio 11.7 : 1 for Output gear ratio 9.25 : 1	
513-4. Main Starting Valve (* If selected 513-3,b)	51310-03H
513-5. Turning Gear a) Turning gear with attachment	51325-03E
b) Electric turning gear	51325-05H
Fuel Oil System (Plate no. 514)	
514-1. Fuel Oil Safety Filter	51415-01H
Lubricating Oil System (Plate no. 515)	
515-1. Centrifugal by-pass filter	515-15.00 Ed.04H 51515-03H
Special equipment (Plate no. 517)	
517-1. Flexible coupling	
517-2. Air motor pump unit for emergency start	
517-3. Oil mist detector( Schaller VN115) 517-4. L.O. Auto back-flushing filter	