



WÄRTSILÄ

W-X62

Operation Manual

“Marine”

Vessel:

Type:

Engine No.:

Document ID: DBAD070428

Wärtsilä Switzerland Ltd.
PO Box 414
CH-8401 Winterthur
Switzerland

24hrs Support: +41 52 262 80 10
technicalsupport.chts@wartsila.com

© 2014 Wärtsilä Switzerland Ltd., Printed in Switzerland – All rights reserved

No part of this publication may be reproduced or copied in any form or by any means (electronic, mechanical, graphic, photocopying, recording, taping or other information retrieval systems) without the prior written permission of the copyright holder.

Wärtsilä Switzerland Ltd. makes no representation, warranty (express or implied) in this publication and assumes no responsibility for the correctness, errors or omissions for information contained herein. Information in this publication is subject to change without notice.

NO LIABILITY WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL, IS ASSUMED WITH RESPECT TO THE INFORMATION CONTAINED HEREIN. THIS PUBLICATION IS CONFIDENTIAL AND INTENDED FOR INFORMATION PURPOSES ONLY.

W-X62			Summary for Operation Manual (OM)			
Page No.	Modification		Title	Subject	Page or Manual	
	Date	No.			new	exch.
	2014			Operation Manual, Issue 2014	x	
				Date of publication 2014-06-05		

Intentionally blank

0 Operating Descriptions

1 Bedplate and Tie Rod

2 Cylinder Liner and Cylinder Cover

3 Crankshaft, Connecting Rod and Piston

4 Engine Control and Control Elements

5 Supply Unit, Servo Oil Pump and Fuel Pump

6 Scavenge Air System

7 Cylinder Lubrication

8 Piping Systems

9 Engine Monitoring

Intentionally blank

Table of Contents

Operating Descriptions	Group 0
For Your Attention	0000-1/A1
General	
Preface	0010-1/A1
Subject Index	0030-1/A1
Abbreviations	0035-1/A1
How to Use the Operation Manual	0040-1/A1
Short Description of the Engine	0050-1/A1
Two-stroke Diesel Engine – Operation	0060-1/A1
The Relation between Engine and Propeller	0070-1/A1
Basic Engine Data	0080-1/A1
Prepare the Engine for Operation	
Prepare for Engine Start after a Short Shutdown Period (One or More Days)	0110-1/A1
Prepare the Fuel System for Operation	0120-1/A1
Prepare the Servo Oil System	0130-1/A1
Prepare the Cylinder Lubricating System	0140-1/A1
Operation during Usual Conditions	
General	0200-1/A1
Safety Precautions and Warnings (General Data)	0210-1/A1
Slow Turning	0220-1/A1
Engine Start	0230-1/A1
Usual Operation	0240-1/A1
Operating Data Sheet	
Pressure and Temperature Ranges at Continuous Service Power MCR	0250-1/A1
Alarms and Safeguards at Continuous Service Power	0250-2/A1
Operation	
Manoeuvring	0260-1/A1
Change-over from Diesel Oil to Heavy Fuel Oil and Back	0270-1/A1
Operation at Low Load	0280-1/A1
Operation at Overload	0290-1/A1
Engine Shutdown	
General	0310-1/A1
Procedures after Engine Stop	0320-1/A1
Operation – Special Procedures	
Running-in New Cylinder Liners and Piston Rings	0410-1/A1
Indicator Diagrams	0420-1/A1
Procedures to Prevent Contamination and Fire in the Scavenge Air Spaces	0450-1/A1
Prevention of Crankcase Explosions – Instructions	0460-1/A1

Table of Contents

Operation during Unusual Conditions

General Data	0500-1/A1
Operation with Injection Cut Out (One or More Cylinders)	0510-1/A1
Faults in High Pressure Fuel System	0515-1/A1
Operation with Exhaust Valve Control Unit Cut Out	0520-1/A1
Faults in Servo Oil System	0525-1/A1
CCM-20 Failure	0530-1/A1
Operation with Running Gear Partially or Fully Removed	0540-1/A1
Operation with Water Leakage into the Combustion Chamber	0545-1/A1
Defective Scavenge Air Cooler / Defective Auxiliary Blowers	0550-1/A1
Defective Remote Control	0560-1/A1
Defective Speed Control System	0570-1/A1
Defective Turbocharger	0590-1/A1

Special Procedures Before and After Operation

Prepare for Engine Start after a Long Shutdown Period or an Overhaul	0610-1/A1
Prepare the Engine for a Long Shutdown Period	0620-1/A1

Operating Media

Diesel Engine Fuels	0710-1/A1
Fuel Treatment and Fuel System	0720-1/A1
Scavenge Air and Starting Air	0740-1/A1
Lubricating Oils	0750-1/A1
Cooling Water / Cooling Water Treatment	0760-1/A1

Problems during Operation

General	0800-1/A1
Problems During Engine Start and Stop	0810-1/A1
Irregular Operation	0820-1/A1
Problems and Damage to Engine Parts	0840-1/A1

Bedplate and Tie Rod**Group 1**

Main Bearing	1132-1/A1
Thrust Bearing	1203-1/A1
Tie Rod	1903-1/A1

Cylinder Liner and Cylinder Cover**Group 2**

Cylinder Liner	2124-1/A1
Lubricating Quills on Cylinder Liner	2138-1/A1
Piston Rod Gland	2303-1/A1
Injection Valve (FAST Nozzle)	2722-1/A1
Starting Valve	2728-1/A1
Exhaust Valve	2751-1/A1

Table of Contents

Crankshaft, Connecting Rod and Piston	Group 3
Axial Damper	3140-1/A1
Connecting Rod and Connecting Rod Bearing	3303-1/A1
Crosshead and Guide Shoe	3326-1/A1
Piston	3403-1/A1
Crosshead Lubrication and Piston Cooling	3603-1/A1
 Engine Control and Control Elements	 Group 4
Engine Control	
Engine Control System UNIC	4002-1/A1
Local Control Panel / Local Display Unit (LDU-20)	4002-2/A1
Engine Control	4003-1/A1
Control Diagram	
Identification of Parts	4003-2/A0
Control Diagram	4003-2/A1
Pipe Diagram – Water Systems (Cylinder Cooling)	4003-3/A1
Pipe Diagram – Water Systems (Scavenge Air Receiver and Turbocharger)	4003-4/A1
Pipe Diagram – Oil Systems (System Oil, Internal TC Oil Supply)	4003-5/A1
Pipe Diagram – Oil Systems (System Oil, External TC Oil Supply)	4003-6/A1
Pipe Diagram – Servo Oil	4003-7/A1
Pipe Diagram – Oil Systems (Cylinder Lubrication)	4003-8/A1
Pipe Diagram – Air Systems (Starting Air and Control Air)	4003-9/A1
Pipe Diagram – Air Systems (Exhaust Gas and Scavenge Air)	4003-10/A1
Pipe Diagram – Fuel, Drain and Extinguishing Systems	4003-11/A1
Supply Unit Drive	4104-1/A1
Starting Air Shut-off Valve	4325-1/A1
Control Air Supply	4605-1/A1
Pick-up for Speed Measurement	4628-1/A1
 Supply Unit, Servo Oil Pump and Fuel Pump	 Group 5
Servo Oil Pump	5551-1/A1
Supply Unit	5552-1/A1
Fuel Pump	5556-1/A1
Fuel Pump – Cutting Out and Cutting In	5556-2/A1
Pressure Control Valve	5562-1/A1

Table of Contents

Scavenge Air System	Group 6
Scavenge Air Receiver	6420-1/A1
Turbocharging	6500-1/A1
Cleaning the Turbocharger in Operation	
Turbocharger – All Types	6510-1/A1
Auxiliary Blower and Switch Box	6545-1/A1
Scavenge Air Cooler: Operation Instructions and Cleaning	6606-1/A1
Scavenge Air Waste Gate	6735-1/A1
Cylinder Lubrication	Group 7
Cylinder Lubrication	7218-1/A1
Cylinder Lubrication – LFR and HFR Bushes	7218-2/A1
Piping Systems	Group 8
Lubricating Oil System	8016-1/A1
Cooling Water System	8017-1/A1
Starting Air Diagram	8018-1/A1
Fuel Oil System	8019-1/A1
Exhaust Waste Gate (Low-load-Tuning)	8135-1/A1
Drainage System and Wash-water Piping System	8345-1/A1
Electrical Trace Heating System	8825-1/A1
Engine Monitoring	Group 9
Crank Angle Sensor Unit	9223-1/A1
Intelligent Combustion Control	9308-1/A1
Oil Mist Detector	9314-1/A1
Location of UNIC Electronic Components	9362-1/A1

Subject Index

Alphabetical Table of Contents

A

Abbreviations	0035-1/A1
Air flaps in the scavenge air receiver	6420-1/A1
Alarms and safeguards at continuous service power	0250-2/A1
Auxiliary blower and switch box	6545-1/A1
Auxiliary blower, failure of... ..	0550-1/A1
Axial damper	3140-1/A1

B

Bleed the lubricating pump	7218-1/A1
----------------------------------	-----------

C

CCM-20 failure	0530-1/A1
Change-over from diesel oil to heavy fuel oil and back	0270-1/A1
Checks, engine controls	4003-1/A1
Cleaning the cooling water system	0760-1/A1
Cleaning the scavenge air cooler in operation	6606-1/A1
Cleaning the turbocharger during operation	6510-1/A1
Compressed air, starting air, control air	0740-1/A1
Control air supply	4605-1/A1
Control diagram, designations	4003-2/A0
Control diagram	4003-2/A1
Connecting rod, connecting rod bearing	3303-1/A1
Cooling water system	8017-1/A1
Cooling water treatment	0760-1/A1
Crank angle sensor unit	9223-1/A1
Crankcase explosions, prevention of... ..	0460-1/A1
Crosshead and guide shoe	3326-1/A1
Cut out an exhaust valve control unit	0520-1/A1
Cylinder liner	2124-1/A1
Cylinder liner, running-in of new... ..	0410-1/A1
Cylinder lubrication	7218-1/A1
Cylinder lub. oil supply unit	7218-1/A1
Cylinder lubricating system, control	7218-1/A1
Cylinder lubricating system, procedures before taking into service	0140-1/A1

D

Damage to engine parts	0840-1/A1
Defective remote control system	0560-1/A1
Drainage system and wash-water piping system	8345-1/A1
Draining cooling water	8017-1/A1
Drive supply unit	4104-1/A1

Alphabetical Table of Contents

<u>E</u>	
Emergency operation with exhaust valve closed / opened	0520-1/A1
Engine, short description of.....	0050-1/A1
Engine control	4003-1/A1
Engine control system UNIC	4002-1/A1
Engine numbering and designations	0080-1/A1
Exchange of defective exhaust valve control unit	0520-1/A1
Exchange of defective hydraulic piping	0520-1/A1
Exhaust valve	2751-1/A1
Exhaust Waste Gate (low-load-tuning)	8135-1/A1
<u>F</u>	
Failure of auxiliary blower	0550-1/A1
Faults in HP fuel system	0515-1/A1
Faults in servo oil system	0525-1/A1
Finding group and page numbers	0040-1/A1
Fires in scavenge air spaces, prevention of.....	0450-1/A1
For your attention	0000-1/A1
Fuels for diesel engines	0710-1/A1
Fuel leakage system	8019-1/A1
Fuel oil system	8019-1/A1
Fuel oil system, prepare for.....	0120-1/A1
Fuel pump	5556-1/A1
Fuel treatment	0720-1/A1
<u>G</u>	
General indications for operation	0210-1/A1
Guide shoe on crosshead	3326-1/A1
<u>H</u>	
Heavy fuel, quality requirements	0710-1/A1
Heavy fuel, treatment	0720-1/A1
<u>I</u>	
Indicator diagrams	0420-1/A1
Injection valve	2722-1/A1
Irregular functions during operation	0820-1/A1

Alphabetical Table of Contents

L

Leakage and wash-water piping system	8345-1/A1
Leakage check of pressure control valve	8019-1/A1
Leakage servo oil	8016-1/A1
Local control panel	4002-2/A1
Location of flex electronic components	9362-1/A1
Low-load-Tuning	8135-1/A1
Lubricating oils	0750-1/A1
Lubricating oil system	8016-1/A1
Lubricating quills	2138-1/A1
Lubrication of cylinder liner	7218-1/A1

M

Main bearing	1132-1/A1
Manoeuvring	0260-1/A1

O

Oil mist detector	9314-1/A1
Operating data sheet, alarms and safeguards	0250-2/A1
Operating data sheet, pressure and temperature ranges	0250-1/A1
Operating medium, air	0740-1/A1
Operating medium, oil	0750-1/A1
Operating medium, water	0760-1/A1
Operating troubles, general	0800-1/A1
Operating with defective turbocharger	0590-1/A1
Operation at low load	0280-1/A1
Operation at overload	0290-1/A1
Operation under Usual conditions, general information	0210-1/A1
Operation under Usual conditions, summary	0200-1/A1
Operation interruption, measures before extended standstill	0620-1/A1
Operation under Unusual conditions, general information	0500-1/A1
Operation during unusual conditions	0500-1/A1 to 0590-1/A1
Operation with injection cut out (one or more cylinders)	0510-1/A1
Operation with a running gear removed	0540-1/A1
Operation with cut out exhaust valve control unit	0520-1/A1
Operation with scavenge air cooler out of service	0550-1/A1
Operation with water leakage into the combustion chamber	0545-1/A1

Alphabetical Table of Contents

<u>P</u>	
Pick-up for speed measurement	4628-1/A1
Pipe diagram – Water systems	4003-3/A1
Pipe diagram – Oil systems	4003-4/A1
Pipe diagram – Air systems	4003-5/A1
Pipe Diagram – Servo Oil	4003-6/A1
Pipe Diagram – Oil Systems (Cylinder Lubrication)	4003-7/A1
Pipe Diagram – Air Systems (Starting Air and Control Air)	4003-8/A1
Pipe Diagram – Air Systems (Exhaust Gas and Scavenge Air)	4003-9/A1
Pipe Diagram – Fuel, Drain and Extinguishing Systems	4003-10/A1
Pipe diagram – Fuel, heating and extinguishing systems	4003-11/A1
Piston	3403-1/A1
Piston cooling and crosshead lubrication	3603-1/A1
Piston and piston rings, running-in of cylinder liner	0410-1/A1
Piston rod gland	2303-1/A1
Precautionary measures for operation	0210-1/A1
Preface	0010-1/A1
Prepare the fuel oil system for operation	0120-1/A1
Prepare the servo oil system	0130-1/A1
Prepare before taking into service	0110-1/A1
Prepare before starting after a prolonged shut-down period or an overhaul	0610-1/A1
Pressure and temperature ranges	0250-1/A1
Pressure control valve	5562-1/A1
Pressure release servo oil rail	8016-1/A1
Prevention of crankcase explosions	0460-1/A1
Problems, during operation	0820-1/A1
Problems when starting and shutting down	0810-1/A1
Problems with engine parts (damage)	0840-1/A1
Procedures after engine stop	0320-1/A1
Procedures before putting out of service for a long period	0620-1/A1
Procedures before starting after a short shut-down (one or more days)	0110-1/A1
Procedures to prevent contamination and fire in the scavenge air spaces	0450-1/A1
Propeller curve	0070-1/A1
<u>Q</u>	
Quality requirements for heavy fuel oil	0710-1/A1
<u>R</u>	
Relationship between engine and propeller	0070-1/A1
Remote control system defective	0560-1/A1
Running gear, operation with removed... ..	0540-1/A1
Running-in of new cylinder liner, piston and piston rings	0410-1/A1

Alphabetical Table of Contents

S

Safety measures and warnings (general information)	0210-1/A1
Scavenge air	0740-1/A1
Scavenge air cooler, operating instructions and cleaning	6606-1/A1
Scavenge air cooler out of service, failure of auxiliary blower	0550-1/A1
Scavenge air receiver	6420-1/A1
Section Views	0040-1/A1
Servo oil leakage	8016-1/A1
Servo oil pump	5551-1/A1
Service pump	8016-1/A1
Shutting down, general	0310-1/A1
Shutting down, measures to be taken after the	0320-1/A1
Shut-off valve for starting air	4325-1/A1
Slow turning	0220-1/A1
Speed control system defective	0570-1/A1
Speed measurement, pick-up for... ..	4628-1/A1
Starting	0230-1/A1
Starting air system, schematic diagram	8018-1/A1
Starting valve	2728-1/A1
Structure of the manuals	0010-1/A1
Supply unit	5552-1/A1
Symbols	0010-1/A1

T

Table of contents	0020-1/A1
Thrust bearing	1203-1/A1
Tie rod	1903-1/A1
Turbocharger out of service	0590-1/A1
Turbocharger surging	0820-1/A1
Turbocharging	6500-1/A1

U

UNIC engine control system	4002-1/A1
Unusual operating conditions	0500-1/A1
Usual operation	0240-1/A1

V

Viscosity-temperature diagram	0710-1/A1
-------------------------------------	-----------

W

Warnings (general information), safety precautions and	0210-1/A1
Wash-water piping system	8345-1/A1
Water, operating medium... ..	0760-1/A1
Working principle of two-stroke diesel engine	0060-1/A1