

OPERATION MANUAL

Ralex 15-7

SER. NO. HY1570001~

 **HYUNDAI**
HEAVY INDUSTRIES CO.,LTD.

INTRODUCTION

⚠ WARNING

Read this manual carefully before operating the machine to ensure safe and optimum running conditions. If you do not understand any of the points in the manual, or the machine breaks down, contact your dealer. In particular, attention needs to be paid to the following points.

- Read this operation manual if you have any questions or doubts on any point to ensure proper and safety excavator operation.
- Keep this operation manual in the excavator at any time to ensure readily access to it in case a need for it arises.
- Be sure to hand over this operation manual to the new owner if the ownership of the excavator is to be transferred.
- Make every possible effort to ensure proper and safety operation of the excavator.

- Note that a portion of the contents of this instruction manual may differ from the excavator you have purchased, which is mainly due to the improvements adopted for it.
- Consult our marketing staff if you have any questions or comments on this operation manual.

HOW TO USE THE OPERATION MANUAL

Read this manual carefully before operating the machine.
This chapter describes the marks in the operation manual.

Symbols:

DANGER

This symbol shows an immediate hazard that will cause death or severe injury if the instruction is not observed.

WARNING

 
This symbol shows a hazard that can cause death or severe injury if the instruction is not observed.

CAUTION

This symbol shows a hazard that can cause injury of machine damage if the instruction is not observed.

IMPORTANT

This symbol shows a hazard that can cause damages to the excavator or reduce its service life if the instruction is not observed.



This symbol shows the tightening torque for a given bolt that needs to be strictly observed during the assembly.



This symbol shows related matters or the referring page.



This symbol shows the amount of grease or oil that needs to be filled.

- If you notice any ambiguous points in this manual, consult your dealer.
- The descriptions and figures in this operation manual may not coincide with the machine due to changes in the specifications.



CONTENTS

OPERATION

Safety Decals	1
Basic Precautions on Safety	3
Safety Precautionary Notes before Start	4
Safety Precautions during Operation	6
Safety Precautions during Inspection and Maintenance	15
Safety Post Operational Caution	18
Part Names	19
Explanation of Each Device	21
Operation	28
Operational Precautions	32
Transporting by Truck	38
Machine Traction	40
How to Hoist a Machine	41
Cold Weather or During-Winter Operations	43
Long-Period Storage	45

INSPECTION AND MAINTENANCE

Ordering Parts and Servicing Guidelines	46
Inspections	47
Maintenance after the First 50 Service Hours (New Machine)	52
Maintenance after the First 100 Service Hours (New Machine)	53
Maintenance Every 50 Service Hours	54
Maintenance Every 100 Service Hours	56
Maintenance Every 250 Service Hours	57
Maintenance Every 500 Service Hours	58
Maintenance Every 1000 Service Hours	60
To Pressurize	61
Inspection and Maintenance Procedures for Engine Parts	63
Inspection and Maintenance Procedures	64
Periodical Inspections and Maintenance List	68
Lubricants	70

OTHERS

Dimensions and Specifications	74
Hydraulic Circuit	76
Electric Circuit	77

Diesel Engines

ABS	Agco-Sisu
Akasaka	Baudouin
BMW	Bukh
Caterpillar	CHN 25/34
Cummins	Daihatsu
Detroit	Deutz
Doosan-Daewoo	Fiat
Ford	GE
Grenaa	Guascor
Hanshin	Hatz
Hino	Honda
Hyundai	Isotta
Isuzu	Iveco
John-Deere	Kelvin
Kioti	Komatsu
Kubota	Liebherr
Lister	Lombardini
MAK	MAN B&W
Mercedes	Mercruiser
Mirrlees BS	Mitsubishi
MTU	MWM
Niigata	Paxman
Perkins	Pielstick
Rolls / Bergen	Ruggerini
Ruston	Scania
Shibaura	Sisu-Valmet
SKL	Smit-Bolnes
Sole	Stork
VM-Motori	Volvo
Volvo Penta	Westerbeke
Wichmann	Yanmar

Machinery

ABG	Airman
Akerman	Ammann
Astra	Atlas Copco
Atlas Weyha.	Atlet
Bell	Bendi
Bigjoe	Bobcat
Bomag	BT
Carelift	Case
Caterpillar	Cesab
Challenger	Champion
Claas	Clark
Combilift	Crown
Daewoo-Doosan	Demag
Deutz-Fahr	Dressta

Machinery

Drott	Dynapack
Extec	Faun
Fendt	Fiat
Fiatallis	Flexicoil
Furukawa	Gehl
Genie	Grove-gmk
Halla	Hamm
Hangcha	Hanix
Hanomag	Hartl
Haulpack	Hiab
Hidromek	Hino truck
Hitachi	Hyster
Hyundai	IHI
Ingersoll-rand	JCB
JLG	John-Deere
Jungheinrich	Kalmar
Kato	Kioti
Kleeman	Kobelco
Komatsu	Kramer
Kubota	Lamborghini
Landini	Liebherr
Linde	Link-belt
Manitou	Massey-Ferg.
Mccormick	MDI-Yutani
Mitsubishi	Moxy
Mustang	Neusson
New-Holland	Nichiyu
Nissan	OK
OM-Pimespo	others-tech
Pel-Job	PH-mining
Poclain	Powerscreen
Same	Samsung
Sandvik	Scania
Schaefer	Schramm
Sennebogen	Shangli
Shibaura	Steiger
Steinbock	Steyr
Still	Sumitomo
Super-pac	Tadano
Takeuchi	TCM
Terex	Toyota
Valpadana	Venieri
Versatile	Vogele
Volvo	Weidemann
Wirtgen	Yale
YAM	Yanmar