



TROUBLESHOOTING MANUAL

INDUSTRIAL ENGINES

ELECTRONIC CONTROL

3TNV82A	4TNV84
3TNV82A-B	4TNV84T
3TNV84	4TNV84T-Z
3TNV84T	4TNV88
3TNV84T-B	4TNV88-B
3TNV88	4TNV88-U
3TNV88-B	4TNV94L
3TNV88-U	4TNV98
	4TNV98-Z
	4TNV98-E
	4TNV98T
	4TNV98T-Z
	4TNV106
	4TNV106T

SEE FULL CONTENTS IN BOOKMARKS

**California
Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

**California
Proposition 65 Warning**

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer and reproductive harm.
Wash hands after handling.

Section 1

FAILURE DIAGNOSIS

	Page
DTCs (Diagnostic Trouble Codes) General Description.....	1-3
DTC Code List.....	1-3
Description Items.....	1-7
Analog Input Related Failures	1-8
Pulse Sensor Related Failures	1-60
Contact Output Related Failures	1-66
Contact Input Related Failures	1-100
Actuators etc.....	1-114
E-ECU Internal and Communication Errors.....	1-122
Method and Procedure of Failure Diagnosis	1-133
Description Items.....	1-133
Analog Input Related Failures	1-136
Pulse Sensor Related Failures	1-164
Contact Output Related Failures	1-170
Contact Input Related Failures	1-187
Actuator Related Failures	1-193
ECU Internal and Communication Errors	1-197
FAILURE INDICATOR LAMP FLASHING PATTERN	1-207
Using the Failure Indicator for Failure Diagnosis	1-208
Flashing Patterns of the Failure Indicator.....	1-208
Factor Analysis.....	1-210
2G-Type Eco-Governor Speed-Fluctuation Factor Analysis .	1-210
2G-Type Eco-Governor Engine	
Stalling/Start-Up Inability Factor Analysis.....	1-213
2G-Type Eco-Governor Black Smoke Factor Analysis.....	1-216

Engine warning lamp for Yanmar error codes.

While an error is occurring the error warning lamp on the cluster is flashing with a fixed frequency.


This flashing lamp is to get the attention of the driver, not to give the error code as explained in the manual.

The error code signal which is referring to the code table in the manual is given by a sound of the buzzer.

So to know the right error code you have to listen to the buzzer only.

Remark : Listening to the buzzer and looking at the flashing lamp together gives a very confusing feeling and it is very hard to write down the correct error code.

EGR Code 1-3

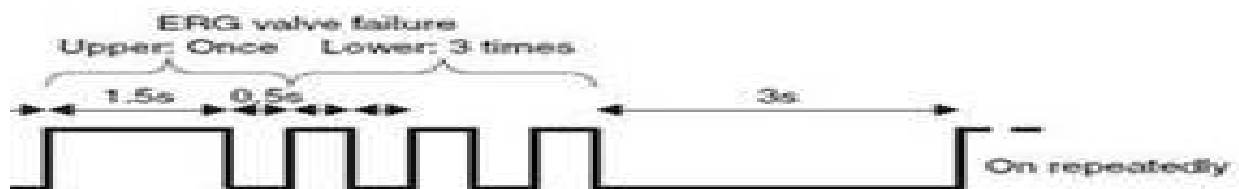

Buzzer : ON_____OFF ON/OFF ON/OFF ON/OFF (1 long, 3 short) ↗ correct error.

DTCS (DIAGNOSTIC TROUBLE CODES) GENERAL DESCRIPTION

DTC Code List

Classification	DTC	BUZZER Flashing Patterns	Error Item		Referenced page number	
			Area	Status	Overview	Failure Diagnosis
Analog Input Related Failures	P1202/4	7	Rack position sensor	Error (low voltage)	P.1-8	P.1-136
	P1203/3			Error (high voltage)	P.1-10	
	P0122/4	5	Accelerator sensor	Error (low voltage)	P.1-12	P.1-140
	P1203/3			Error (high voltage)	P.1-14	
	P0124/2			Intermittent failure	P.1-16	
	P1125/1			Error (foot pedal-close position)	P.1-18	P.1-144
	P1126/0			Error (foot pedal-open position)	P.1-20	
	P0222/4	1-8	Spare accelerator sensor	Error (low voltage)	P.1-22	P.1-148
	P0223/3			Error (high voltage)	P.1-24	
	P0224/2			Intermittent failure	P.1-26	
	P1225/1			Error (foot pedal-close position)	P.1-28	P.1-144
	P1226/0			Error (foot pedal-open position)	P.1-30	
	P1227/8			Error (pulse communication)	P.1-32	
	P0222/4	1-9	Atmospheric pressure sensor	Error (low voltage)	P.1-34	P.1-148
	P0223/3			Error (high voltage)	P.1-36	
	P0224/2			Intermittent failure	P.1-38	
	P0668/4	4-1	ECU Temperature Sensor	Error (low voltage)	P.1-40	P.1-154
	P0669/3			Error (high voltage)	P.1-41	
	P1644/2			Intermittent failure	P.1-42	
	P0634/0	2-5	ECU Temperature Rise Alarm		P.1-43	P.1-154
	P0117/4	4	Cooling water temperature sensor	Error (Low Voltage)	P.1-45	P.1-156
	P0118/3			Error (High Voltage)	P.1-47	
	P0119/2			Intermittent failure	P.1-49	
	P0217/0	3-6	Cooling Water Temperature Rise Alarm		P.1-51	P.1-156
	P0642/4	2-4	SENSOR 5V	Error (low voltage)	P.1-53	P.1-160
	P0643/3			Error (High Voltage)	P.1-54	
	P1644/2			Intermittent failure	P.1-55	
P0562/1	2-3	Power supply Voltage	Error (Low Voltage)	P.1-56	P.1-56	
P0563/0			Error (High Voltage)	P.1-58	P.1-58	