

Equipment information

Equipment: 00005682991
Type: BF 6L 913
Output: 0000000,0 kW
Speed: 0000 1/min
Build date: 01.05.1976
KLU-Number:
ETL scope: EU123148
MVS: 212

VKU date: 01.05.1976

VKU' date:

Commissioning date:

Begin of guarantee period:

Man. begin of guar. period: no

End of guarantee period:

ID maintenance contract:

ID insurance contract:

Guarantee package:

Assembly group directory

Equipment: 00005682991
Output: 0000000,0 kW
ETL scope: EU123148

Engine type: BF 6L 913
Speed: 0000 1/min

CG	ETL-No.	Designation (en)	Designation (en)
1		Crankcase	
1	0500 3305	Fastenings	Fastenings
1	0500 3320	Lock	Lock
1	0500 3326	Cover	Cover
1	0500 3860	Breather	Breather
1	0500 6503	Idler bearing	Idler bearing
1	0500 6528	Crankcase	Crankcase
1	0500 6708	Front cover	Front cover
1	0500 6727	Nozzle	Nozzle
1	0502 2206	Dipstick	Dipstick
2		Oil pan	
2	0500 6523	Oil pan	Oil pan
4		Cylinder	
4	0500 6500	Cylinder	Cylinder
5		Crankshaft	
5	0500 6564	Crankshaft	Crankshaft
5	0500 6606	Flywheel	Flywheel
6		Connecting rod	
6	0500 6589	Connecting rod	Connecting rod
7		Piston	
7	0502 0070	Piston	Piston
8		Cylinder head	
8	0500 6586	Valve mechan.cover	Valve mechan.cover
8	0500 6592	Cylinder head	Cylinder head
10		Camshaft	
10	0500 3399	Camshaft	Camshaft
11		Timing gears	
11	0502 0076	Valve drive	Valve drive
11	0502 2186	Protecting tube	Protecting tube
14		Lube oil pump	
14	0500 6504	Lubricat. oil pump	Lubricat. oil pump
15		Lube oil/-cooler	
15	0500 6552	Filter cartridge	Filter cartridge
15	0502 2201	Lubric. oil cooler	Lubric. oil cooler
15	0502 2216	Support	Support
16		Oil pipes	
16	0500 3431	Bypass line	Bypass line
16	0500 6502	Pressure oil pipe	Pressure oil pipe
16	0500 6526	Oil suction line	Oil suction line
17		Injection pump	
17	0500 3451	Overflow valve	Overflow valve
17	0500 6653	Fuel inject. pump	Fuel inject. pump
17	0502 7032	Parts inject.pump	Parts inject.pump
17	0502 7094	Parts of governor	Parts of governor
18		Injection pump drive	
18	0500 5871	Inject. pump drive	Inject. pump drive
19		Injector	
19	0500 6543	Fuel injector	Fuel injector

Equipment:	00005682991	Engine type:	BF 6L 913
Output:	0000000,0 kW	Speed:	0000 1/min
ETL scope:	EU123148		

CG	ETL-No.	Designation (en)	Designation (en)
20		Fuel filter	
20	0500 3462	Fuel filter	Fuel filter
21		Fuel pipes/fuel tank	
21	0500 3470	High pressure pipe	High pressure pipe
21	0500 3471	Overflow valve	Overflow valve
21	0500 3843	Leak off line	Leak off line
22		Suction pipe/air cleaner	
22	0500 2104	Bath air cleaner	Bath air cleaner
22	0500 2105	Bracket	Bracket
22	0500 3520	Transfer pipe	Transfer pipe
22	0500 3526	Precleaner	Precleaner
22	0500 6616	Reducer	Reducer
26		Heater plug installation	
26	0500 3540	Heat.plug tell-tal	Heat.plug tell-tal
33		Air compressor	
33	0500 3549	Blanking parts	Blanking parts
39		Cooling air blower	
39	0500 6665	Cooling fan	Cooling fan
39	0501 6314	Narrow v-belt	Narrow v-belt
39	0502 0088	Grille/grid	Grille/grid
40		Cooling air ducting	
40	0500 3574	Guide rail	Guide rail
40	0500 3586	Cool.air feed duct	Cool.air feed duct
40	0500 3597	Cooling air baffle	Cooling air baffle
40	0500 6519	Air duct wall	Air duct wall
40	0500 6664	Air guide part	Air guide part
40	0500 6713	Air duct wall	Air duct wall
41		Exhaust manifold	
41	0500 2097	Flange	Flange
41	0500 6520	Exhaust pipe	Exhaust pipe
41	0500 6522	Exhaust manifold	Exhaust manifold
41	0500 6615	Reducer	Reducer
43		Turbocharger	
43	0500 6558	Return pipe	Return pipe
43	0500 6641	Cooling air baffle	Cooling air baffle
43	0500 6689	Turbocharger	Turbocharger
43	0502 2205	Lubricat. oil line	Lubricat. oil line
43	0502 9101	Parts turbocharger	Parts turbocharger
44		Alternator/starter motor	
44	0500 3661	Plug connection	Plug connection
44	0500 3709	Generator	Generator
44	0500 3725	Protecting cap	Protecting cap
44	0500 6546	Starter	Starter
44	0500 6587	Regulator cut-out	Regulator cut-out
44	0500 6588	Driving parts	Driving parts
44	0502 7011	Parts start.motor	Parts start.motor
44	0502 7044	Parts of alternat.	Parts of alternat.
46		Engine mounting, rigid	
46	0500 3713	Engine mounting	Engine mounting
48		Electrical accessories	

Equipment: 00005682991
Output: 0000000,0 kW
ETL scope: EU123148

Engine type: BF 6L 913
Speed: 0000 1/min


CG	ETL-No.	Designation (en)	Designation (en)
48	0500 3723	Wiring	Wiring
48	0500 3734	Electr. equipment	Electr. equipment
48	0500 3736	Incandescent lamp	Incandescent lamp
51		Measuring instruments	
51	0500 3754	Warning unit	Warning unit
56		Engine shutdown	
56	0500 6572	Shutdown lever	Shutdown lever
56	0500 6639	Shutdown device	Shutdown device
63		Starting aid	
63	0500 3802	Heater plug assy	Heater plug assy
83		Hydraulic pump	
83	0500 3812	Blanking parts	Blanking parts
90		Set of parts	
90	0506 3836	Gasket set	Gasket set
90	0506 3921	Gasket set	Gasket set

ETL no.: 0500 6528 Crankcase

Constr. Group: 01

Equipment: 00005682991
Output: 0000000,0 kW
ETL scope: EU123148

Engine type: BF 6L 913
Speed: 0000 1/min

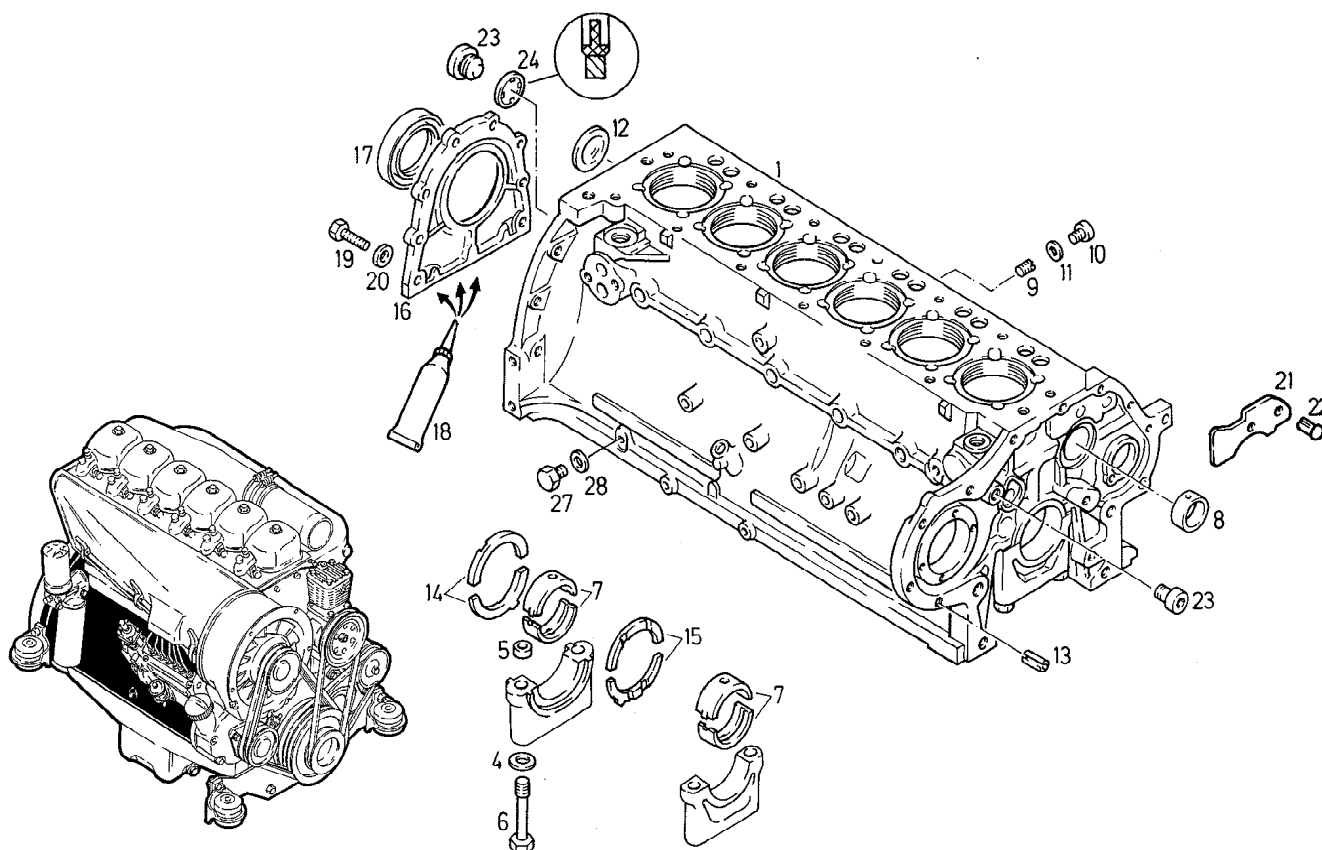

0500 6528

Item	Material	Kit	MS	VS	Quant	Unit	Ord	Designation (en)	Designation (en)	Remark
1	02232773		10		1	ST		Crankcase	Crankcase	
4	01218426				14	ST		Plain washer	Plain washer	
5	03362279				14	ST		Bush	Bush	
6	02233313	Kit !			14	ST		Hexagon bolt	Hexagon bolt	
7	02230609	Kit !	10		7	ST		Main bearing	Main bearing	NORMAL 75,00MM RD(2,952 8 IN.) UNTERMASST.POS.950-955
8	02139737	Kit !	50	50	1	ST		Bearing bush	Bearing bush	
9	01215235				7	ST		Slotted plug	Slotted plug	
10	01110422				7	ST		Screw plug	Screw plug	
11	01118673				7	ST		Sealing ring	Sealing ring	
12	01216240				1	ST		Dished plug	Dished plug	
13	01167266				2	ST		Clamping bush	Clamping bush	
14	02230196	Kit !	90	90	1	ST		Stop ring	Stop ring	NORMAL 3,00MM (0,1181 IN.) UEBERMASST.POS.956-959
15	02230201	Kit !	90	90	1	SA		Stop ring	Stop ring	NORMAL 3,00MM (0,1181 IN.) UEBERMASST.POS.960-963
16	02234786		10		1	ST		Cover	Cover	
17	02234134		10		1	ST		Rot.shaft lip seal	Rot.shaft lip seal	
18	01016120		20	20	1	KG		Packing compound	Packing compound	
19	01112322		20	20	8	ST		Hexagon bolt	Hexagon bolt	

ETL no.: 0500 6528 Crankcase

Constr. Group: 01

Equipment: 00005682991
 Output: 0000000,0 kW
 ETL scope: EU123148

Engine type: BF 6L 913
 Speed: 0000 1/min

Item	Material	Kit	MS	VS	Quant	Unit	Ord	Designation (en)	Designation (en)	Remark
20	01102799				8	ST		Lock washer	Lock washer	
21	02231082				1	ST		Deflector plate	Deflector plate	
22	01115333				2	ST		Notched nail	Notched nail	
23	04159934	90	90		2	ST		Screw plug	Screw plug	
24	04159935	90	90		1	ST		Sealing ring	Sealing ring	
27	01118998				2	ST		Screw plug	Screw plug	
28	01118659				2	ST		Sealing ring	Sealing ring	
950	02230610	10			7	SA		Main bearing	Main bearing	1.UNTERMASST.74,75MM RD (2,9429 IN.)
951	02230611	10			7	SA		Main bearing	Main bearing	2.UNTERMASST.74,50MM RD (2,9331 IN)
952	02230612	10			7	SA		Main bearing	Main bearing	3.UNTERMASST.74,25MM RD (2,9232 IN)
953	02230613	10			7	SA		Main bearing	Main bearing	4.UNTERMASST.74,00MM RD (2,9134 IN)
954	02230614	10			7	SA		Main bearing	Main bearing	5.UNTERMASST.73,75MM RD (2,9035 IN)
955	02230615	10			7	SA		Main bearing	Main bearing	6.UNTERMASST.73,50MM RD (2,8937 IN)
956	02230197	50	50		1	SA		Stop ring	Stop ring	1.UEBERMASST.3,25 MM (3.1279 IN)
957	02230198				1	SA		Stop ring	Stop ring	2.UEBERMASST.3,50 MM (0.1378 IN)
958	02230199				1	SA		Stop ring	Stop ring	3.UEBERMASST.3,75 MM (0.1476 IN)
959	02230200				1	SA		Stop ring	Stop ring	4.UEBERMASST.4,00MM RD (0,1575 IN.)
960	02230202	50	50		1	SA		Stop ring	Stop ring	1.UEBERMASST.3,25MM RD (0,1279 IN.)
961	02230203				1	SA		Stop ring	Stop ring	2.UEBERMASST.3,50MM RD (0,1378 IN.)
962	02230204				1	SA		Stop ring	Stop ring	3.UEBERMASST.3,75MM RD (0,1476 IN.)
963	02230205				1	SA		Stop ring	Stop ring	4.UEBERMASST.4,00MM RD (0,1575 IN.)