


SERVICE MANUAL

**CRAWLER EXCAVATOR
R55-9**

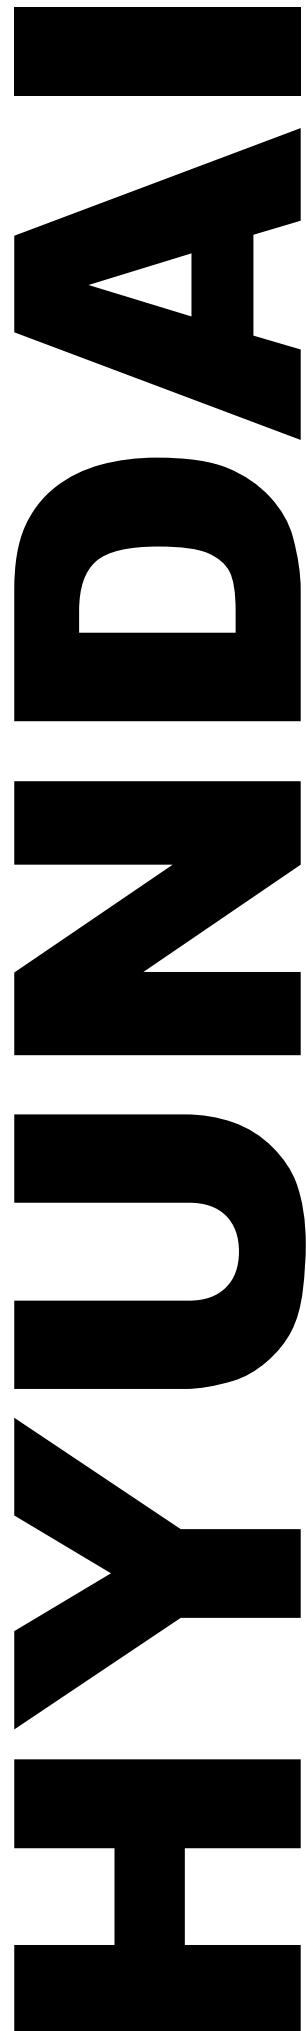

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints	1-1
Group 2 Specifications	1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device	2-1
Group 2 Main Control Valve	2-9
Group 3 Swing Device	2-31
Group 4 Travel Device	2-41
Group 5 RCV Lever	2-50

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit	3-1
Group 2 Main Circuit	3-2
Group 3 Pilot Circuit	3-5
Group 4 Single Operation	3-10
Group 5 Combined Operation	3-25

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Monitoring system	4-3
Group 3 Electrical Circuit	4-16
Group 4 Electrical Component Specification	4-32
Group 5 Connectors	4-39

SECTION 5 TROUBLESHOOTING

Group 1 Before Troubleshooting	5-1
Group 2 Hydraulic and Mechanical System	5-4
Group 3 Electrical System	5-24

SECTION 6 MAINTENANCE STANDARD

Group 1 Operational Performance Test	6-1
Group 2 Major Components	6-21
Group 3 Track and Work Equipment	6-30

SECTION 7 DISASSEMBLY AND ASSEMBLY

Group 1 Precaution	7-1
Group 2 Tightening Torque	7-4
Group 3 Pump Device	7-7
Group 4 Main Control Valve	7-38
Group 5 Swing Device	7-51
Group 6 Travel Device	7-72
Group 7 RCV Lever	7-100
Group 8 Turning Joint	7-114
Group 9 Boom, Arm and Bucket Cylinder	7-119
Group 10 Undercarriage	7-138
Group 11 Work Equipment	7-150

SECTION 8 COMPONENT MOUNTING TORQUE

Group 1 Introduction Guide	8-1
Group 2 Engine System	8-2
Group 3 Electric System	8-4
Group 4 Hydraulic System	8-5
Group 5 Undercarriage	8-7
Group 6 Structure	8-8
Group 7 Work Equipment	8-10

SECTION 1 GENERAL


Group 1 Safety Hints	1-1
Group 2 Specifications	1-9

SECTION 1 GENERAL

GROUP 1 SAFETY


FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.



WEAR PROTECTIVE CLOTHING


Wear close fitting clothing and safety equipment appropriate to the job.

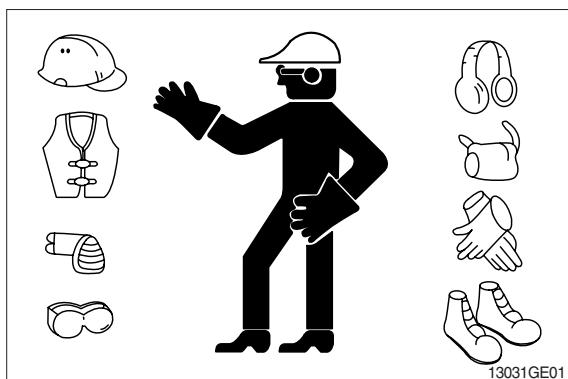

WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.

Before performing any work on the excavator, attach a 「Do Not Operate」 tag on the right side control lever.

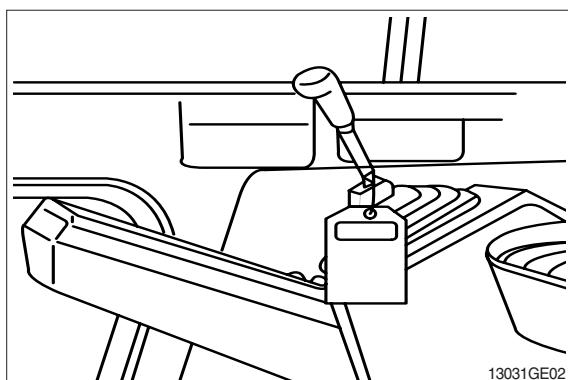


USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.

When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.

Never jump on or off the machine. Never mount or dismount a moving machine.

Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

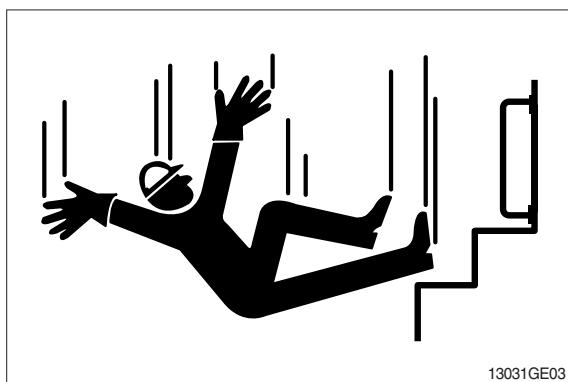


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.


Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

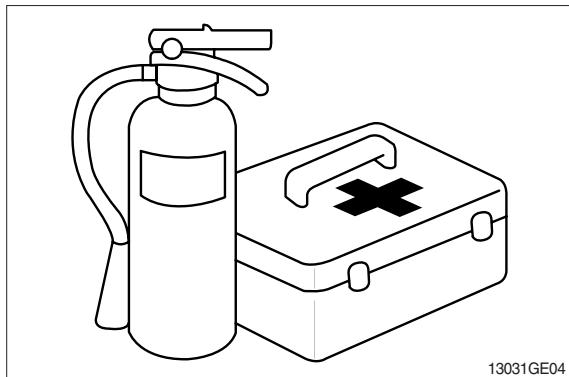

13031GE04

PROTECT AGAINST FLYING DEBRIS

Guard against injury from flying pieces of metal or debris; Wear goggles or safety glasses.

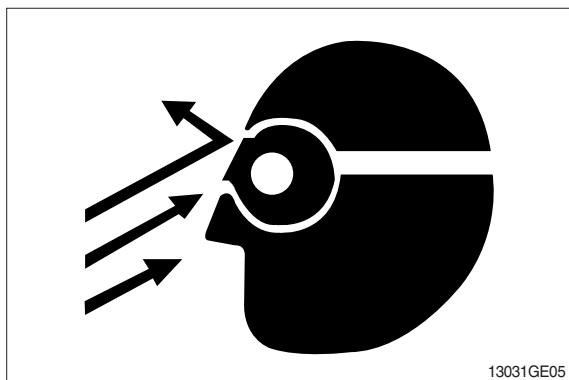


13031GE05

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

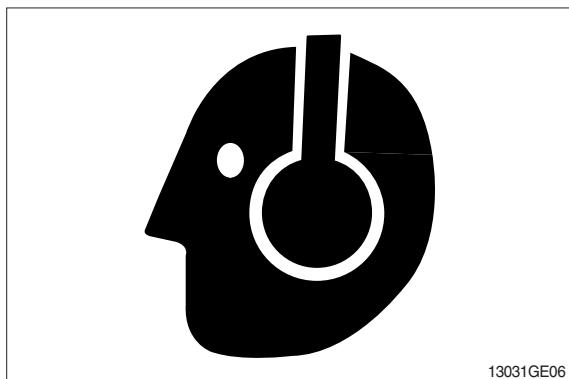


13031GE06

AVOID POWER LINES

Serious injury or death can result from contact with electric lines.

Never move any part of the machine or load closer to electric line than 3m(10ft) plus twice the line insulator length.

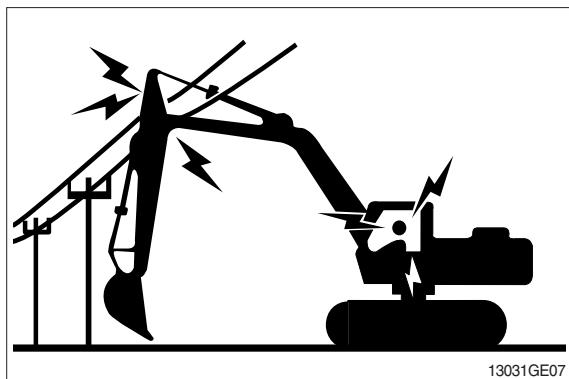

13031GE07

SECTION 6 MAINTENANCE STANDARD

Group 1 Operational Performance Test	6-1
Group 2 Major Components	6-21
Group 3 Track and Work Equipment	6-30

SECTION 6 MAINTENANCE STANDARD

GROUP 1 OPERATIONAL PERFORMANCE TEST

1. PURPOSE

Performance tests are used to check:

1) OPERATIONAL PERFORMANCE OF A NEW MACHINE

Whenever a new machine is delivered in parts and reassembled at a customer's site, it must be tested to confirm that the operational performance of the machine meets Hyundai spec.


2) OPERATIONAL PERFORMANCE OF A WORKING MACHINE

With the passage of time, the machine's operational performance deteriorates, so that the machine needs to be serviced periodically to restore it to its original performance level.

Before servicing the machine, conduct performance tests to check the extent of deterioration, and to decide what kind of service needs to be done (by referring to the "Service Limits" in this manual).

3) OPERATIONAL PERFORMANCE OF A REPAIRED MACHINE

After the machine is repaired or serviced, it must be tested to confirm that its operational performance was restored by the repair and/or service work done.

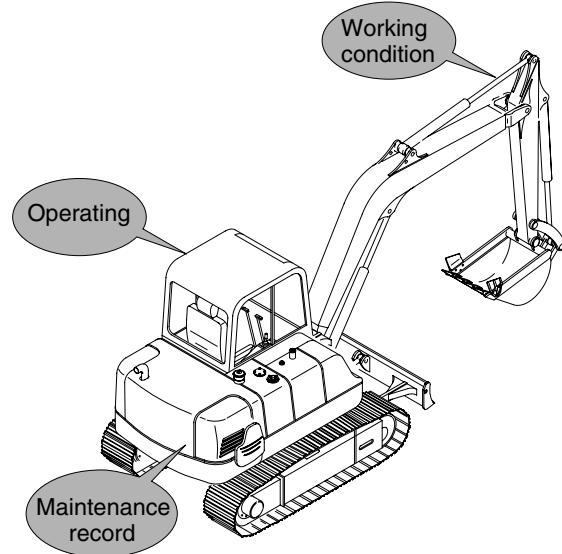


R5576MC01

GROUP 8 TURNING JOINT

1. REMOVAL AND INSTALL


1) REMOVAL

- (1) Lower the work equipment to the ground and stop the engine.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.
- ⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.**
 - * When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.
- (4) Disconnect all hoses.
- (5) Sling the turning joint assembly (1) and remove the mounting bolt (2).
 - Weight : 30 kg (70 lb)
 - Tightening torque : $12.3 \pm 1.3 \text{ kgf} \cdot \text{m}$
($88.9 \pm 9.4 \text{ lbf} \cdot \text{ft}$)
- (6) Remove the turning joint assembly.
 - * When removing the turning joint, check that all the hoses have been disconnected.

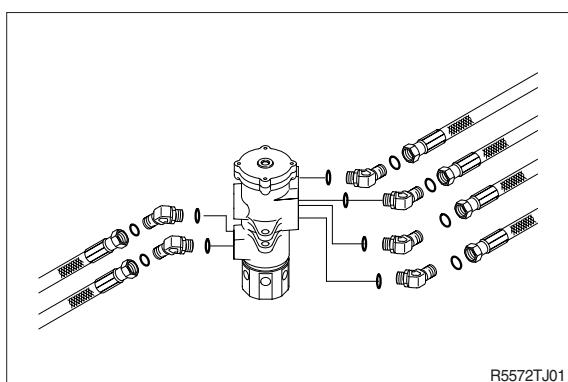

2) INSTALL

- (1) Carry out installation in the reverse order to removal.
- * Take care of turning joint direction.
- * Assemble hoses to their original positions.
- * Confirm the hydraulic oil level and check the hydraulic oil leak or not.

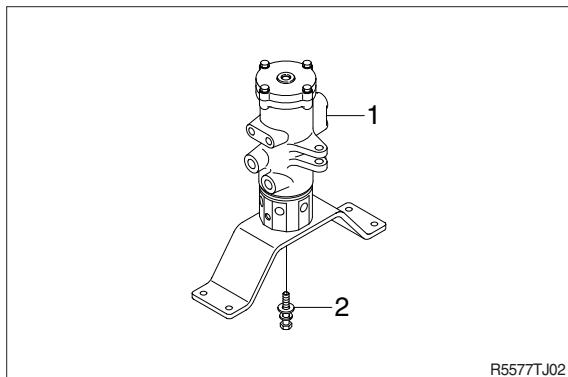

SECTION 8 COMPONENT MOUNTING TORQUE

Group 1	Introduction guide	8-1
Group 2	Engine system	8-2
Group 3	Electric system	8-4
Group 4	Hydraulic system	8-5
Group 5	Undercarriage	8-7
Group 6	Structure	8-8
Group 7	Work equipment	8-10

SECTION 8 COMPONENT MOUNTING TORQUE


GROUP 1 INTRODUCTION GUIDE

1. This section shows bolt specifications and standard torque values needed when mounting components to the machine.
2. Use genuine Hyundai spare parts.

We expressly point out that Hyundai will not accept any responsibility for defects resulted from non-genuine parts.


In such cases Hyundai cannot assume liability for any damage.

- ※ Only metric fasteners can be used and incorrect fasteners may result in machine damage or malfunction.
- ※ Before installation, clean all the components with a non-corrosive cleaner. Bolts and threads must not be worn or damaged.

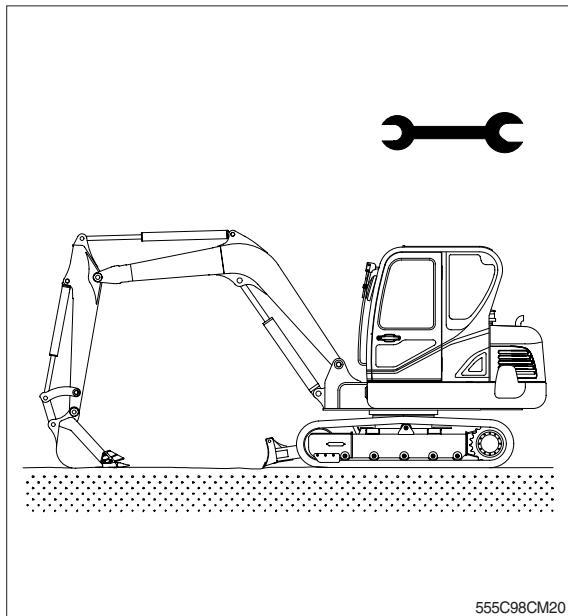

GROUP 2 ENGINE SYSTEM

1. ENGINE AND ACCESSORIES MOUNTING

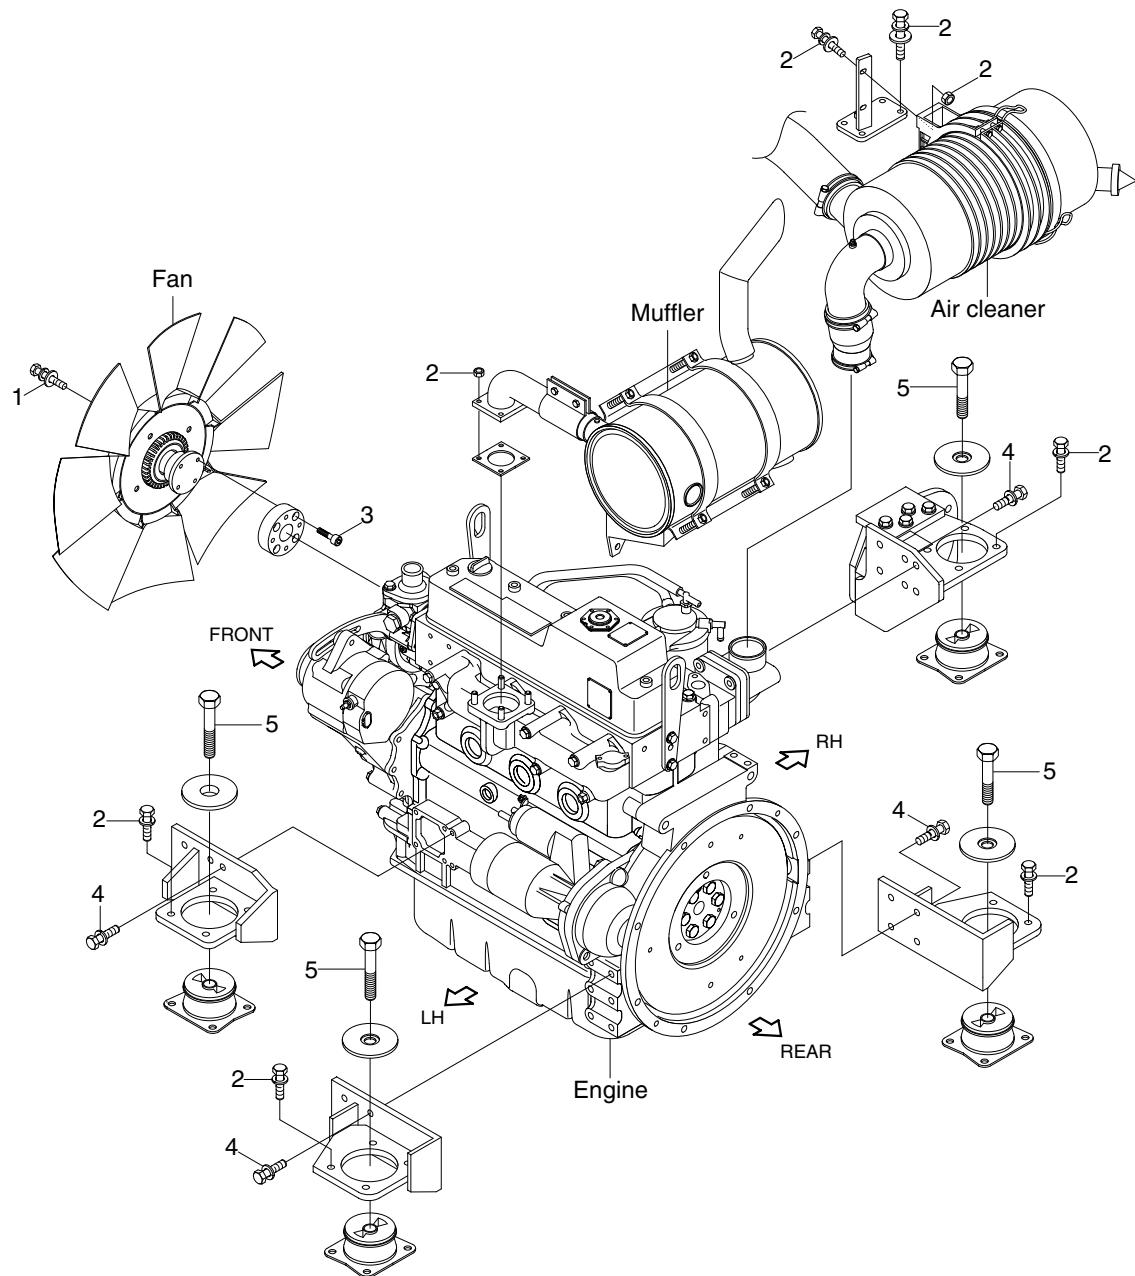

5598CM01

- Tightening torque

Item	Size	kgf · m	lbf · ft
1	M 8×1.25	1.8±0.2	13.0±1.4
2	M 8×1.25	2.5±0.5	18.1±3.6
3	M 8×1.25	3.0±0.2	21.7±1.4

Item	Size	kgf · m	lbf · ft
4	M10×1.5	6.9±1.0	49.9±7.2
5	M16×2.0	25±2.5	181±18

Tech Library <http://engine.od.ua>

Diesel Engines		Machinery	
ABS	Agco-Sisu	Drott	Dynapack
Akasaka	Baudouin	Extec	Faun
BMW	Bukh	Fendt	Fiat
Caterpillar	CHN 25/34	Fiatallis	Flexicoil
Cummins	Daihatsu	Furukawa	Gehl
Detroit	Deutz	Genie	Grove-gmk
Doosan-Daewoo	Fiat	Halla	Hamm
Ford	GE	Hangcha	Hanix
Grenaa	Guascor	Hanomag	Hartl
Hanshin	Hatz	Haulpack	Hiab
Hino	Honda	Hidromek	Hino truck
Hyundai	Isotta	Hitachi	Hyster
Isuzu	Iveco	Hyundai	IHI
John-Deere	Kelvin	Ingersoll-rand	JCB
Kioti	Komatsu	JLG	John-Deere
Kubota	Liebherr	Jungheinrich	Kalmar
Lister	Lombardini	Kato	Kioti
MAK	MAN B&W	Kleeman	Kobelco
Mercedes	Mercruiser	Komatsu	Kramer
Mirrlees BS	Mitsubishi	Kubota	Lamborghini
MTU	MWM	Landini	Liebherr
Niigata	Paxman	Linde	Link-belt
Perkins	Pielstick	Manitou	Massey-Ferg.
Rolls / Bergen	Ruggerini	Mccormick	MDI-Yutani
Ruston	Scania	Mitsubishi	Moxy
Shibaura	Sisu-Valmet	Mustang	Neusson
SKL	Smit-Bolnes	New-Holland	Nichiyu
Sole	Stork	Nissan	OK
VM-Motori	Volvo	OM-Pimespo	others-tech
Volvo Penta	Westerbeke	Pel-Job	PH-mining
Wichmann	Yanmar	Poclain	Powerscreen
Machinery		Machinery	
ABG	Airman	Same	Samsung
Akerman	Ammann	Sandvik	Scania
Astra	Atlas Copco	Schaefer	Schramm
Atlas Weyha.	Atlet	Sennebogen	Shangli
Bell	Bendi	Shibaura	Steiger
Bigjoe	Bobcat	Steinbock	Steyr
Bomag	BT	Still	Sumitomo
Carelift	Case	Super-pac	Tadano
Caterpillar	Cesab	Takeuchi	TCM
Challenger	Champion	Terex	Toyota
Claas	Clark	Valpadana	Venieri
Combilift	Crown	Versatile	Vogele
Daewoo-Doosan	Demag	Volvo	Weidemann
Deutz-Fahr	Dressta	Wirtgen	Yale
		YAM	Yanmar